




High Performance Blender

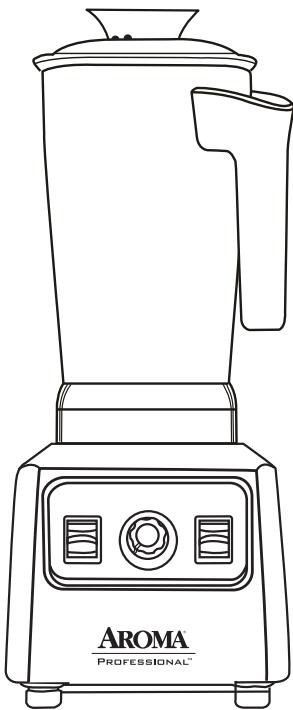

Questions or concerns about your blender?
Before returning to the store...



*Aroma's customer service experts are happy to help.
Call us toll-free at 1-800-276-6286*



*Answers to many common questions and even
replacement parts can be found online. Visit
www.AromaCo.com/Support.*



IMPORTANT SAFEGUARDS

WARNING: Serious personal injuries can occur with any blender if it is not used properly. To avoid such risks, always follow the following basic safety precautions:

1. **Read all instructions, safeguards, and warnings before operating.**
2. To prevent risk of electric shock, never place the blender base in water or other liquids. See instruction for cleaning.
3. This appliance should not be used by or near children or incapacitated persons, and extra caution should be exercised when used near them.
4. Unplug from power outlet when not in use and before assembly, disassembly, or cleaning.
5. Avoid contact with moving parts, especially the blade.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Contact Aroma Customer Support at 1-800-276-6286 for examination, repair, or electrical or mechanical adjustment.
7. The use of third party attachments or accessories such as canning jars, tampers, or blades not explicitly recommended or sold by Aroma may cause fire, electric shock, contamination of food, or injury.
8. Do not use outdoors.
9. Do not let the power cord hang over the edge of the table or counter.
10. Do not let the power cord contact hot surfaces, including the stove.
11. Do not let the power cord be submerged in or exposed to water or any liquids. Always ensure that the cord and plug are dry before plugging into a power outlet.
12. Keep hands and utensils out of the blender container while operating to prevent the possibility of severe personal injury and/or damage to the blender. A rubber spatula may be used, but must be used only when the blender is not running.
13. Blades are sharp; handle with care. To avoid injury, never place the blade assembly on the based without the container attached properly.
14. Always make sure the Container Lid is in place while operating. Only use the tamper with the Container Lid in place to prevent the tamper from coming into contact with the blades. Do not use the tamper when blending hot liquids or ingredients.
15. Use caution when blending hot liquids or ingredients, as spray or escaping steam may cause scalding and burns. Do not fill the Container to the maximum capacity. Keep hands and other exposed skin away from the lid opening to prevent possible burns.
16. Do not leave the blender unattended while operating.
17. This product is for HOUSEHOLD USE ONLY.
18. Always unplug from the base of the wall outlet. Never pull on the cord.
19. To disconnect, turn any control to OFF, then remove plug from wall outlet.
20. Use only on a level, dry and heat-resistance surface.

Thank you for choosing Aroma! The Aroma Professional Blender is designed to promote a diet that's both delicious and healthy. It enables you to effortlessly produce nourishing food and drinks including whole fruit and vegetable juices, power-packed smoothies, warm soups, zesty dressings and sauces, baby food and so much more!

This manual contains instructions for using your blender and its convenient settings, as well as all of the accessories included.

For more information on your Aroma blender, or for product service, recipes and other home appliance solutions, please visit us online at www.AromaCo.com.

See what's cooking with Aroma® online!



www.AromaTestKitchen.com



www.facebook.com/AromaHousewares



www.pinterest.com/aromahousewares



www.twitter.com/AromaHousewares

Published By:

Aroma Housewares Co.
6469 Flanders Drive
San Diego, CA 92121
U.S.A.

1-800-276-6286

www.AromaCo.com

©2014 Aroma Housewares Company
All rights reserved.

Failure to follow any of these steps can void your warranty and create the risk of serious injury.

SAVE THESE INSTRUCTIONS 1




IMPORTANT SAFEGUARDS



- Use this product with rated voltage AC outlets only. Make sure to unplug the Power Cord when the blender is not being used.


Short Cord Instructions

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.

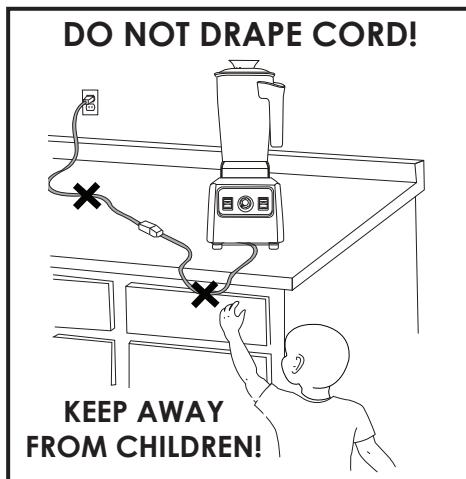

Grounding Instructions

This appliance must be grounded while in use to protect the operator from electrical shock. The appliance is equipped with a 3-conductor cord and a 3-prong grounding-type plug to fit the proper grounding-type receptacle. The appliance has a plug that looks like sketch A. An adaptor, sketch B, should be used for connecting sketch-A plug plugs to two-plugs to two-prong receptacles. The grounding tab, which extends from the adaptor, must be connected to a permanent ground such as a properly grounded outlet box as shown in sketch C using a metal screw.

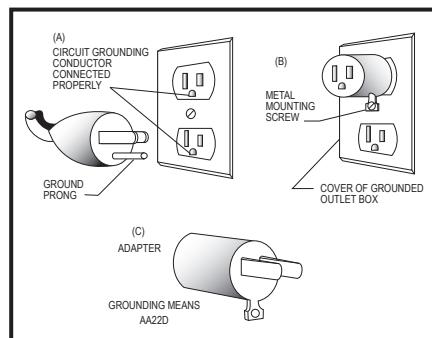


Failure to follow any of these steps can void your warranty and create the risk of serious injury.



IMPORTANT SAFEGUARDS

POWER CORD

The Power Cord is stored neatly at bottom of the base by three plastic tabs. To unravel the cord for use twist the plastic tabs to the side until they no longer hold the cord in place.

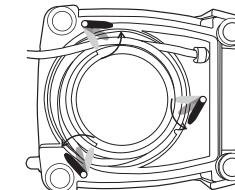

This appliance is equipped with a short power cord to reduce the risk of becoming entangled in or tripping over the cord. Longer extension cords may be used if the following steps are followed with care:

1. The marked electrical rating of the extension cord should be at least as high as the electrical rating of the appliance.
2. Take care that the cord and extension cord does not drape over the counter top where it can be reached by children or tripped over.

OVERLOAD FAIL-SAFE

For safety, the core motor is equipped with a built in circuit breaker that will automatically shut off in case of an electrical overload. To reset the unit after an automatic shut off, simply press the circuit breaker reset button located on the bottom left of the back of the base.

The core motor is also equipped with a temperature guard system to prevent damage from overheating and will automatically shut off if the temperature ever exceeds 250°F. The unit will be ready to resume function as soon as the motor cools down.

Failure to follow any of these steps can void your warranty and create the risk of serious injury.




ADDITIONAL SAFETY CONSIDERATIONS

1. Do not open the Container Lid until the blades have completely stopped turning.
2. Unplug the power cord after each use.
3. Do not submerge the base of the blender in water or other liquids. The base is NOT dishwasher safe.
4. Do not leave foreign objects, such as spoons, forks, or knives, in the container when starting the blender as this may cause damage as well as serious personal injury.
5. Make sure that the blender and motor assembly are firmly affixed to the blender base before turning on the blender.
6. To avoid risk of injury from blades, always use a spoon or the included rubber spatula to remove food from the blender.

Failure to follow any of these steps can void your warranty and create the risk of serious injury.

4 SAVE THESE INSTRUCTIONS

PARTS AND FEATURES

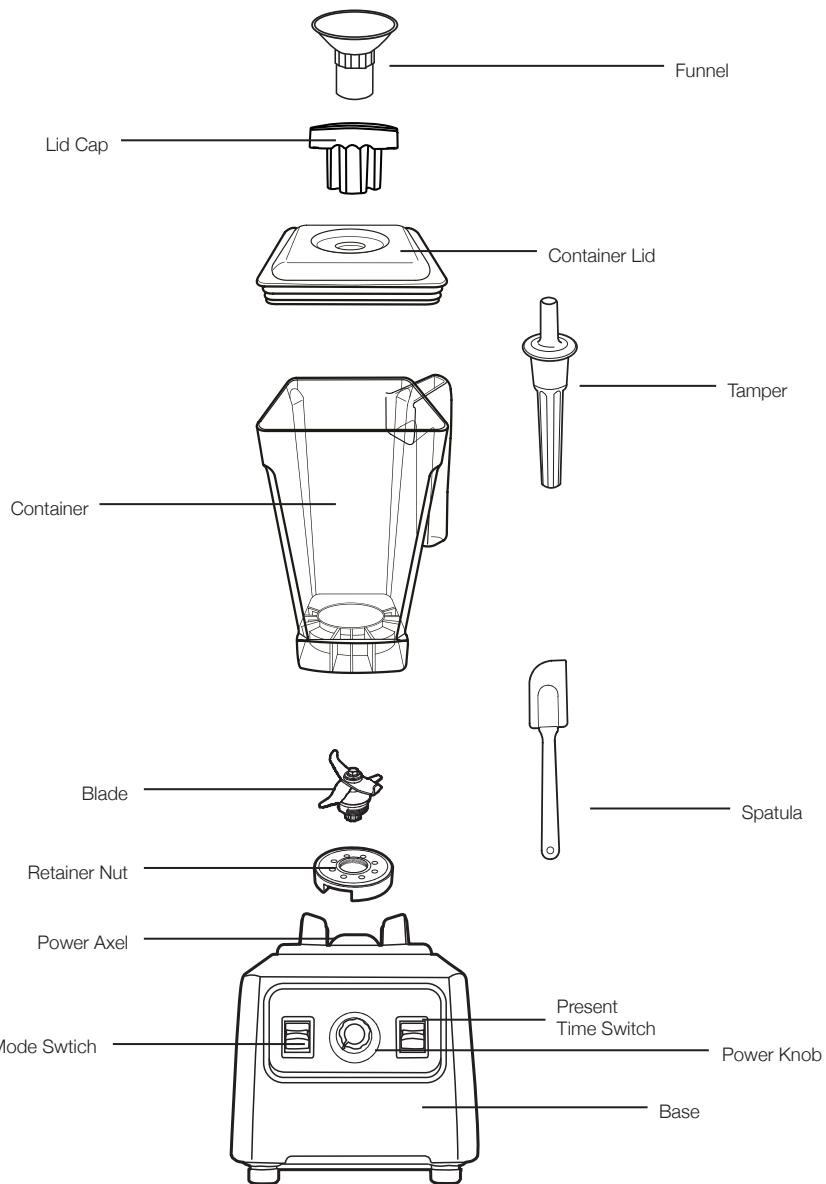

PARTS AND FEATURES

CONTAINER LID

The Aroma Professional Blender comes with a heat resistant, easy to clean lid with an opening to accommodate the included Lid Cap, Funnel, and Tamper. To place the Container Lid on the Container hold it by the Lid Tab. Insert that corner into the corner closets to the container handle then press down on the remaining corners until the Container Lid is tightly secure. To remove the Lid, hold the Container down while lifting the Lid Tab.



- To avoid splashing, potential scalding from hot liquids, and other potentially serious injuries, make sure the Lid is always on while the machine is running.

LID CAP

The Lid Cap features a unique cross-shaped design to allow for ventilation, making it safe to use while blending hot liquids while preventing splashing or scalding. With the Container Lid secure, insert the Lid Cap by fitting the cross-shaped end into the opening and pressing down until it is tightly secure. To remove, hold the Container Lid down with one hand while twisting the Lid Cap until it is loose enough to remove.

FUNNEL

With the Container Lid secure, insert the narrow end of the funnel into the lid opening to make it easier to pour liquids or finer foods into the Container without spilling.

TAMPER

Maneuver the Tamper through the opening of the Container Lid to press ingredients into the blades.



- Do not use the Tamper without the Container Lid to ensure that the Tamper does not come in contact with the blades. Since the Tamper's splash disc covers the entire opening on the Container Lid, do not use it while blending hot foods, as this can cause an unsafe build-up of pressure or steam.

PARTS AND FEATURES


BLADES

The Aroma Professional Blender comes equipped with a unique set of powerful horn-shaped serrated blades that are suitable for both wet and dry blending. They are made of 420-J2 stainless steel hardened with an electrolytic surface treatment and spin on two rust resistant SUS 440 zinc alloy bearings.



- Blades are sharp and can cause serious injury. Do not put hands into the Container while the blender is on or when the Container is on the base.

CONTROL PANEL

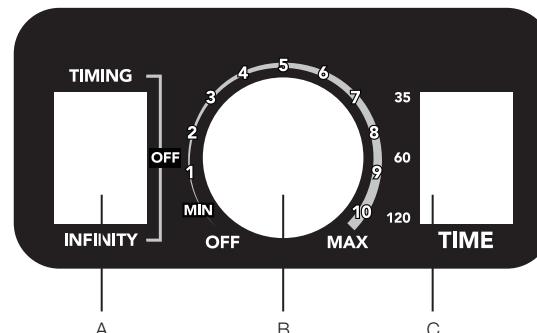

- MODE SWITCH:** The Mode Switch has three positions: TIMING, OFF, and INFINITY. In TIMING mode, the unit will run for the duration specified by the Preset Time Switch. In INFINITY mode, the unit will continue to run until shut off manually. In OFF mode, the unit will not start.
- POWER KNOB:** The Power Knob turns the unit on and allows the user to control the speed of the blades from MIN to MAX. The Knob is only active if the Mode Switch is set to either TIMING or INFINITY.
- RESET TIME SWITCH:** The Preset Time Switch has three settings: 35 seconds, 60 seconds, and 120 seconds. When the Mode Switch is set to TIMING, the unit will run for whichever duration the Preset Time Switch is set to.



- For best results and safety, we recommend always setting the Mode Switch first before starting the blender using the Power Knob.

HOW TO BLEND WET INGREDIENTS

1. Load ingredients into the Container. When pouring in liquids, the liquid level should at minimum cover the blades. Cover with the Container Lid and secure the Lid Cap. **WARNING:** To prevent overflow, do not fill the container above the 6 cup line as the level may increase during blending and from tamping.
2. Set the Container firmly on the Base.
3. Set the Mode Switch and, if necessary, the Time Switch.
4. Turn the Power Knob clockwise to turn on the blender. For best results, blend on MAX.



- WARNING**
- When blending hot liquids, start on MIN before moving the speed up to avoid potential burning or scalding from splashing. Beware of hot steam venting from the opening of the Container Lid that can cause burns, even with the Lid Cap in place.

5. To add additional ingredients, remove the Lid Cap and add ingredients using the Funnel. Once the contents are pureed, add water or ice until it reaches the desired volume and/or thickness.
6. Turn the Power Knob counter-clockwise to turn off the blender, and then set the Mode Switch to OFF.
7. Remove the Container from the Base, and the Container Lid from the Container. Pour the contents from the Container, using the included Spatula to scrape out if necessary.



- TIP**
- When making jam purées, fruits high in water content such as strawberries do not need any additional water. Add sugar to the ingredients and blend on MAX until pureed. Pour the contents into a double boiler and allow it to cook for 10 to 15 minutes. Allow to cool before serving.

HOW TO BLEND DRY INGREDIENTS (GRINDING)

1. Load the ingredients into the Container. For best results, use pre-roasted ingredients. Cover with the Container Lid and either secure the Lid Cap or insert the Tamper.
2. Set the Container firmly on the Base.
3. Set the Mode Switch and, if necessary, the Time Switch.
4. Turn the Power Knob clockwise to turn on the blender. For best results, start on MIN and slowly work the power up to MAX.
5. To add additional ingredients, remove the Lid Cap and add ingredients using the Funnel.
6. Turn the Power Knob counter-clockwise to turn off the blender, and then set the Mode Switch to OFF.
7. Remove the Container from the Base, and the Container Lid from the Container. Pour the contents from the Container, using the included Spatula to scrape out if necessary.



- TIP**
- For Powders, roast ingredients in microwave or conventional oven until all moisture content has been evaporated. Fill the Container up to at least the 1.5 cup line. Blend on MAX until the ingredients have been ground to powder.


CLEANING AND CARE

To ensure the longevity of your Aroma Professional Blender, always make sure to clean after each use. The blender can be cleaned easily with the following steps:

1. Fill the Container up half way with clean water up to the 4 cup marker. For more thorough cleaning, add two slices of lemon or a couple drops of detergent. Cover with the Container Lid and secure the Lid Cap.
2. Set the Container firmly on the Base.
3. Set the Mode Switch to Timing and the Time switch to 35.
4. Turn the Power Knob clockwise to MAX.
5. Allow the machine to run until it stops automatically.
6. Remove the Container from the Base, remove the Container Lid, and rinse out the Container thoroughly with clean water.
7. Dry the exterior of the Container and place it back on the Base.
8. Turn the Power Knob to MAX for three seconds to dry out the Bearings. Turn the blender off, remove the Container, and allow it to air dry.



When cleaning the appliance, do not soak the power axle in water .

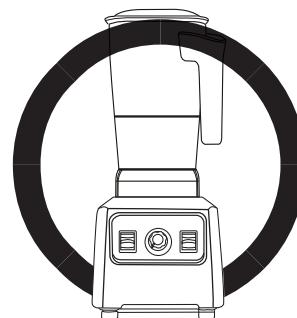

Fill the pitcher with clean water and start the machine to clean it .



TROUBLESHOOTING



- For your safety, always make sure the Mode Switch and Power Switch are both set to Off, and the Power Cord is unplugged before troubleshooting.

My blender will not start.

Double check the power cord to make sure that it is properly plugged in. Press the circuit breaker reset button located on the bottom left of the back of the base. If the device still does not work, call Aroma Customer Service at 1-800-276-6286.

My blender stopped suddenly mid-use and I cannot get it to start again.

It is possible that your blender has overloaded or overheated. Your Aroma Professional Blender is equipped with an automatic overload fail-safe that automatically shuts off the machine for safety when overloaded with electricity or heat (see page 4). To reset the unit after an automatic shut off, simply press the circuit breaker reset button located on the bottom left of the back of the base.

In case of overheating, simply wait 15 minutes for the motor to cool, and the unit should resume functionality.

The blade does not rotate smoothly and the machine makes loud abnormal sounds.

The retainer nut in the Container may have come loose. Stop using immediately and contact Aroma Customer Service at 1-800-276-6286.



LIMITED WARRANTY

Aroma Housewares Company warrants this product free from defects in material and workmanship for one year from provable date of purchase in the continental United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$26.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for a return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on the part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and which may vary from state to state and does not cover areas outside the United States.

AROMA HOUSEWARES COMPANY
6469 Flanders Drive
San Diego, California 92121
1-800-276-6286
M-F, 8:30 AM - 5:00 PM, Pacific Time
Website: www.AromaCo.com