

AROMA[®]

Citrus Juicer



Instruction Manual

Model ACJ-181

Congratulations! Your **AROMA** Citrus Juicer will surely become one of the most versatile and practical appliances in your home. Enjoy freshly squeezed citrus juice anytime!

Please read the following instructions carefully before your first use.



Published By:

Aroma Housewares Co.
6469 Flanders Drive
San Diego, CA 92121
U.S.A.
1-800-276-6286
www.aromaco.com

© 2005 Aroma Housewares Company All rights reserved.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Read all instructions before use.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug or juicer base in water or any other liquid.
4. Close supervision is necessary when this appliance is used by or near children. This appliance not intended to be used by children.
5. Unplug from outlet when not in use and before cleaning.
6. Do not operate this appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electrical burner, or in a heated oven.
11. To disconnect, remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Avoid contact with moving parts.

SAVE THESE INSTRUCTIONS

SHORT CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce risk resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised.
3. If a longer extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.


This appliance has a polarized plug (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.



This appliance is for household use only.

PARTS IDENTIFICATION

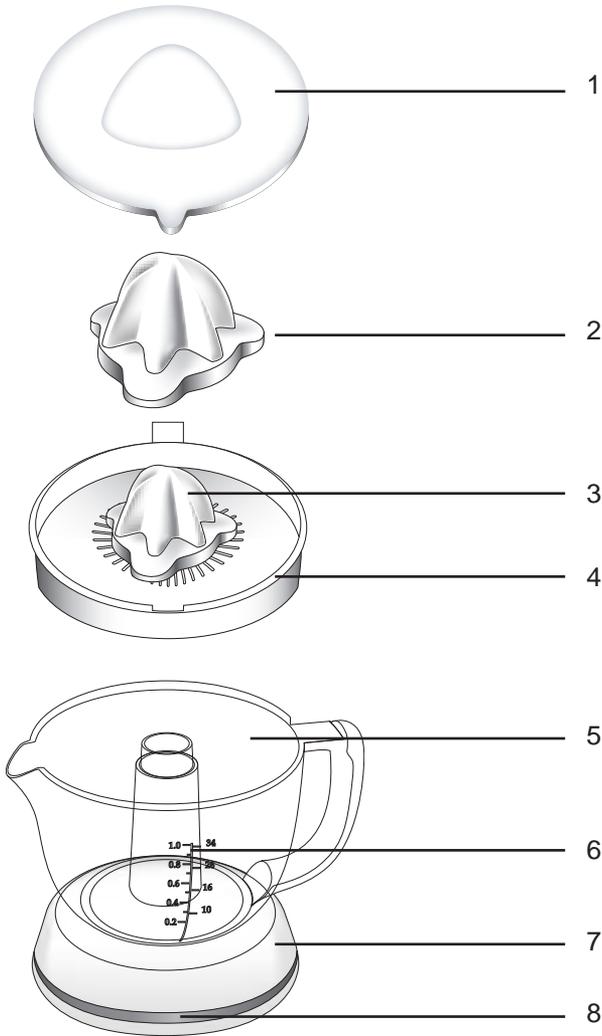

- | | |
|------------------------|----------------------|
| 1. Water reservoir lid | 5. Juice pitcher |
| 2. Large reamer | 6. Measurement marks |
| 3. Small reamer | 7. Motor housing |
| 4. Strainer | 8. Cord storage |

HOW TO USE AND CLEAN

Before First Use:

1. Read all instructions and important safeguards.
 2. Remove all packaging materials and make sure items are received in good condition. Tear up and dispose of any plastic bags as they pose a risk to children.
 3. Wash accessories in warm, soapy water. Rinse and dry thoroughly.
 4. Wipe body clean with a damp cloth.
- ∅ Do not use abrasive cleaners or scouring pads.
- ∅ Do not immerse the citrus juicer base, plug or cord in water or other liquid at any time.

To Assemble:

1. Place pitcher securely on the base.
2. Place strainer on pitcher.
3. Choose the appropriate reamer and place over the strainer (see Parts Identification).

To Make Juice:

1. Cut the citrus fruit into halves.
2. Power starts automatically by pressing fruit down onto reamer. Move fruit from side to side while reaming to get all juice from fruit.
3. Juicer will reverse directions automatically when power is applied and released and then reapplied.
3. When finished, lift the remains of the fruit off the reamer.
4. To make more juice, repeat the above steps.

NOTE:

- When pulp starts to accumulate in strainer, stop juicing temporarily and remove the reamer. Empty the pulp and replace the reamer back on the drive shaft to continue juicing.

To Clean:

1. Unplug the juicer.
2. Remove reamer, strainer and pitcher from the base. Clean with warm, soapy water.
3. Rinse and dry thoroughly before storing.
4. Wipe the base with a damp cloth.

CAUTION:

- Do not wash citrus juicer or any parts in the dishwasher.
- Do not use abrasive cleaners or scouring pads.
- Do not immerse the citrus juicer base, plug or cord in water or other liquid at any time.

LIMITED WARRANTY

Aroma Housewares Company warrants this product free from defects in material and workmanship for one year from provable date of purchase in continental United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$6.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on the part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and which may vary from state to state and does not cover areas outside the United States.

AROMA HOUSEWARES COMPANY
6469 Flanders Drive
San Diego, California 92121
1-800-276-6286
M-F, 8:30 AM - 5:00 PM, Pacific Time
Website: www.aromaco.com