



Table of contents

1. Intended use.....	3
2. Package contents	4
3. Technical data	5
4. Safety instructions	5
5. Copyright	8
6. Before initial use.....	8
7. Initial use.....	8
7.1. Inserting the batteries	8
7.2. Using the milk frother	8
7.3. Tips on how to make good milk froth	9
7.4. Changing the batteries	9
8. Ideas for using milk froth	10
9. Cleaning	11
10. Storing the device when not in use	11
11. Troubleshooting	11
11.1. The milk frother is not working	11
12. Environmental and waste disposal information.....	12
13. Marks of conformity	12
14. Warranty information	13

Congratulations!

By purchasing the SilverCrest SMAS 3 A1 milk frother, hereinafter referred to as milk frother, you have opted for a high-quality product.

Familiarise yourself with the milk frother before using it for the first time and read these operating instructions carefully. Observe the safety instructions and only use the milk frother in the manner described in these operating instructions and for the indicated fields of application.

Keep these operating instructions in a safe place. Hand over all documents in the event that you pass on the milk frother to a third party.

1. Intended use

This milk frother is a household device and is only intended for frothing milk. It must not be used outside of closed rooms or in regions with a tropical climate. The milk frother is not intended for business or commercial use. Use the milk frother solely for private purposes in living areas; any other use is deemed improper. This milk frother meets the requirements of all relevant standards and guidelines related to CE conformity. Compliance with these standards is no longer guaranteed if a change is made to the milk frother without the authorisation of the manufacturer. The manufacturer shall not be liable for any damages or faults arising as a result. Only use the accessories provided by the manufacturer.

Please observe the national regulations and/or laws of the country in which the device is used.

2. Package contents

Unpack the milk frother and all of the accessories. Remove all packaging materials and check all of the components for completeness and signs of damage. If any parts are missing or damaged, please contact the manufacturer.

- **Milk frother**
- **Two batteries**
- **These operating instructions**

These operating instructions also have a cover that can be unfolded. The inside of the cover provides a schematic of the milk frother and a number legend. This cover page can remain unfolded while you read other sections of the operating instructions. This provides you with a reference to the controls at all times. The numbers identify the following parts/functions:

1	On/off button
2	Battery compartment
3	Handle
4	LED ring
5	Whisk
6	Protective cover

3. Technical data

Manufacturer	TARGA GmbH
Designation	SilverCrest SMAS 3 A1
Power supply	2 x 1.5 V 
Battery type	2 x AA 1.5 V (Mignon, LR6)
Dimensions (H x Ø)	Approx. 220 x 33 mm
Weight	Approx. 145 g

The specifications and design are subject to change without notice.

4. Safety instructions

Before using the milk frother for the first time, please read the following instructions carefully and observe all warnings, even if you are familiar with using electronic and household devices. Keep these operating instructions in a safe place for future reference. If you give the milk frother away or sell it, please ensure that you also pass on this manual. It is part of the milk frother.

Explanation of symbols used



DANGER! This icon, together with the word 'Danger', indicates an impending dangerous situation which, if not prevented, can lead to serious injuries or even death.



WARNING! This icon indicates important information for the safe operation of the milk frother and user safety.



This icon indicates products that have been tested in relation to their physical and chemical composition and that in accordance with EC 1935/2004 have been regarded as harmless to health in terms of contact with foodstuffs.



DANGER! Risk of injury!

Children and people with disabilities

- This milk frother may be used by children aged eight and over and by people with reduced physical, sensory or mental abilities or who lack experience and knowledge, provided that they are supervised or have been instructed in the safe use of the device and understand the resulting dangers.
- Children must not play with the milk frother.
- Cleaning and user maintenance must not be carried out by children unless they are supervised.
- Children under eight years of age are to be kept away from the milk frother.



DANGER! The packaging material is not a toy. Children must not play with the plastic bags. There is a risk of suffocation.

Store the milk frother out of reach of children.



DANGER! Batteries

Always insert batteries with the correct polarity. When doing so, observe the label in the battery compartment (2). Do not try to recharge the batteries and never throw them onto a fire. Do not use different batteries (old and new, alkaline and carbon etc.) at the same time. Remove the batteries if you intend not to use the device for a longer period of time. There is a risk of explosion and leakage if the device is not used properly.

Batteries must not be opened or deformed in any way because leaking chemicals can cause injury.

Remove leaking batteries immediately in order to prevent damage to the milk frother. You can remove battery fluids with a dry, absorbent cloth. When doing so, wear suitable gloves! Contact with your skin must be avoided.

If it comes into contact with the skin or eyes, rinse/wash the area with plenty of water and seek medical attention.

If a battery is swallowed, you must seek medical attention immediately.



DANGER! Risk of injury!

- Never open the housing of the milk frother. There is a risk of injury if the device is assembled incorrectly. Furthermore, opening the housing will void your guarantee.
- Make sure there are no naked flames (for example, burning candles) placed on or near the milk frother. There is a risk of fire!



WARNING! Damage to property

- Never immerse the handle (3) in water or any other liquid. If liquid enters into the handle (3), remove the batteries immediately and contact the service department (see 'Warranty information' section).
- The milk frother must not be exposed to direct sources of heat (for example, heaters), direct sunlight or strong artificial light.

- Make sure that the milk frother is not exposed to excessive shocks or vibrations.
- No foreign bodies should penetrate into the device.
- The milk frother must not come in contact with hot surfaces.
- The milk frother cannot be used with hard food ingredients.

5. Copyright

All contents of these operating instructions are subject to copyright law and are provided to the user solely as a source of information. Any form of copying or reproduction of data and information without the express written permission of the author is prohibited. This also concerns commercial use of the content and data. The text and illustrations correspond to the technical standards at the time of printing. Subject to alterations.

6. Before initial use

Remove the SMAS 3 A1 milk frother and all accessories from the packaging and check the completeness of the delivery. Keep the packaging material away from children and dispose of it in an environmentally-friendly manner.

7. Initial use

Before you prepare milk for consumption for the first time, you must first clean the milk frother in order to remove dust and any remnants of the packaging material. Follow the procedure described in the 'Cleaning' section.

7.1. Inserting the batteries

Insert the batteries as follows:

- Open the battery compartment (2) by twisting the lid anti-clockwise and removing it.
- Insert the batteries with the correct polarity (note the + and - signs). The polarity is marked on the batteries and in the battery compartment (2).
- Turn the lid clockwise on the battery compartment (2) until it is hand-tight in order to close the battery compartment (2).

7.2. Using the milk frother

Proceed as follows:

- Fill a tall container with the milk you want to froth. Make sure that you fill no more than one-third of the container.
- Pull off the protective cover (6).

- Dip the whisk (5) into the milk until it is slightly above the base of the container.
- Press down on the on/off button (1). The whisk (5) will rotate. The LED ring (4) lights up during operation.
- Swirl in a circular motion until you have created the desired volume of foam. While swirling, slowly and steadily raise the whisk (5). The whisk (5) must always remain within the milk.
- Let go of the on/off button (1) in order to switch off the milk frother. The LED ring (4) will turn off.
- Take the whisk (5) out of the milk as soon as it has come to a standstill.
- Remove the milk foam.
- Clean the milk frother as described in the 'Cleaning' section.

7.3. Tips on how to make good milk froth

- We recommend using cow's milk. Other types of milk behave differently during the frothing process.
- It is best to use milk with a fat content of between 1.5 and 3.5 per cent. Low-fat milk and skimmed milk do not froth well.
- The milk should be cool.
- If you want to make warm milk froth, the milk should not exceed a temperature of 60°C. Otherwise the milk does not froth.
- If you find the milk froth to be too liquidy, we recommend leaving it to rest for around 30 seconds. During this time, the liquid milk can sink down and the milk froth achieves a better consistency.

7.4. Changing the batteries

If the milk frother's performance declines or the device stops working, you need to replace the batteries. Proceed as follows to change the ear cushions:

- Open the battery compartment (2) by twisting the lid anti-clockwise and removing it.
- Remove the old batteries and dispose of them in an environmentally friendly manner.
- Insert the new batteries with the correct polarity (note the + and - signs). The polarity is marked on the batteries and in the battery compartment (2). Do not use different batteries (old and new, alkaline and carbon etc.) at the same time.
- Turn the lid clockwise on the battery compartment (2) until it is hand-tight in order to close the battery compartment (2).

8. Ideas for using milk froth

You can use your freshly made milk froth in various beverages.

We have included some recipes for you here.

Viennese Blend

Freshly brewed coffee

Hot milk

Milk froth

Place the same amount of freshly brewed black coffee and hot milk into a large cup until there is about one centimetre to the rim of the cup. Pour in the freshly made milk froth.

Latte Macchiato

150 ml milk for the milk froth

1 portion of espresso (25–30 ml)

Use the milk to make fresh milk froth and pour the froth into a latte macchiato glass until the glass is three quarters full. Next, slowly and carefully pour the espresso into the milk froth. Those who like strong coffee can add an extra portion of espresso at this stage. Ideally, the espresso has now collected in the centre. The liquid milk is at the bottom and the top of the drink is crowned by a thick layer of froth. If there is any leftover milk froth and space in the glass, you can carefully add it to the rest of the milk froth.

Carajillo – A Spanish drink combining coffee with a shot

1 cup of espresso

1 cl brandy or rum

1–2 cl egg liqueur

1 heaped teaspoon of fine cane sugar

Milk froth

Stir the espresso with the brandy and dissolve the cane sugar in it. Put the egg liqueur into a large glass and then very slowly slide the espresso over a spoon onto the egg liqueur. This creates two layers in the glass. Fill the glass with the freshly made milk froth.

Coffee with nut nougat cream

1 cup of freshly brewed coffee

2 teaspoons of nut nougat cream

Milk froth

Stir the nut nougat cream directly into the freshly brewed coffee, provided it is still very hot. Pour in the freshly made milk froth.

If you like, you can stir some chilli powder into your coffee and sprinkle a little bit onto the milk froth.

Enjoy!

9. Cleaning



WARNING of damage to property

Do not use any scratching or abrasive cleaning agents or abrasive objects (such as a metal scourer) for cleaning purposes. Otherwise the milk frother may be damaged.

Do not clean the milk frother and its accessories in the dishwasher, as this may cause irreparable damage.



Never immerse the handle (3) in water or any other liquid. No liquid may enter the handle (3).



Ideally, cleaning is carried out directly after use. This way, any milk residues cannot dry.

- Pull off the protective cover (6).
- Clean the housing of the milk frother with a soft, damp cloth, using a mild detergent for stubborn stains.
- Place the whisk (5) in rinse water to clean. Press down on the on/off button (1) for a few seconds so that the whisk (5) rotates. Take the whisk (5) out of the rinse water as soon as it has come to a standstill. Rinse the whisk (5) with clear water.
- Dry all of the parts thoroughly.
- Place the protective cover (6) on the device.

10. Storing the device when not in use

If the milk frother is not going to be used for a longer period of time, store it in a safe, clean and dry place.

- Remove the batteries.
- Before storing the device, clean it thoroughly as described in the previous section.

11. Troubleshooting

If your milk frother does not work as usual, use the following instructions to try and solve the problem. If working through the following tips does not eliminate the fault, please contact our hotline (see the 'Warranty information' section).

11.1. The milk frother is not working

- The batteries are dead. Please replace the batteries with new ones of the same type. Please refer to the instructions in the 'Changing the batteries' section.
- The batteries were inserted incorrectly. Please refer to the instructions in the 'Changing the batteries' section.

12. Environmental and waste disposal information



Devices marked with this symbol are subject to the European Directive 2012/19/EU. Electrical and electronic devices may not be put in the household waste, but must be disposed of via designated public disposal centres. By properly disposing of the old device, you can avoid environmental damage and hazards to health. Further information regarding proper disposal of the old device can be obtained from your local authority or the shop where you purchased the device.



Think about environmental protection. Used batteries do not belong in normal domestic waste. You must dispose of them at a collection point for old batteries. Please note that you should only dispose of batteries in collection containers for old batteries when they are fully discharged. If the batteries are not completely dead, you need to take precautionary measures before disposal to prevent short circuits.



Make sure the packaging is disposed of in an environmentally friendly manner. Cardboard packaging can be put out for waste-paper collection or taken to public collection points for recycling. The plastic packaging used for your device is collected by your local waste management company and disposed of in an environmentally-friendly manner.

13. Marks of conformity



This device conforms to the basic requirements and other relevant regulations of the EMC Directive 2014/30/EU and RoHS Directive 2011/65/EU.

You can download the full EU declaration of conformity at the following link:

www.targa.de/downloads/conformity/288600.pdf

14. Warranty information

Warranty of TARGA GmbH

Dear Customer,

This device is sold with three years warranty from the date of purchase. In the event of product defects, you have legal rights towards the seller. These statutory rights are not restricted by our warranty as described below.

Warranty conditions

The warranty period commences upon the date of purchase. Please keep the original receipt in a safe place as it is required as proof of purchase. If any material or manufacturing faults occur within three years of purchase of this product, we will repair or replace the product free of charge as we deem appropriate.

Warranty period and legal warranty rights

The warranty period is not extended in the event of a warranty claim. This also applies to replaced and repaired parts. Any damage or defects discovered upon purchase must be reported immediately when the product has been unpacked. Any repairs required after the warranty period will be subject to charge.

Scope of warranty

The device was carefully manufactured in compliance with stringent quality guidelines and subjected to thorough testing before it left the works. The warranty applies to material and manufacturing faults. This warranty does not cover product components which are subject to normal wear and which can therefore be regarded as wearing parts, or damage to fragile components such as switches, rechargeable batteries or components made of glass. This warranty is void if the product is damaged, incorrectly used or serviced. To ensure correct use of the product, always comply fully with all instructions contained in the user manual. The warnings and recommendations in the user manual regarding correct and incorrect use and handling of the product must always be observed and complied with. The product is solely designed for private use and is not suitable for commercial applications. The warranty is rendered void in the event of incorrect handling and misuse, if it is subjected to force, and also if any person other than our authorised service technicians interfere with the device. No new warranty period commences if the product is repaired or replaced.

Submitting warranty claims

To ensure speedy handling of your complaint, please note the following:

- Before using your product for the first time, please read the enclosed documentation carefully. Should any problems arise which cannot be solved in this way, please call our hotline.
- Always have your receipt, the product article number as well as the serial number (if available) to hand as proof of purchase.
- If it is not possible to solve the problem on the phone, our hotline support staff will initiate further servicing procedures depending on the fault.



Service

GB Phone: 020 - 70 49 04 03
E-Mail: service.GB@targa-online.com

IE Phone: 01 - 4370121
E-Mail: service.IE@targa-online.com

MT Phone: 027 78 11 03
E-Mail: service.MT@targa-online.com

CY Phone: 02 - 20 09 025
E-Mail: service.CY@targa-online.com

IAN: 288600



Manufacturer

Please note that the following address is not a service address. First contact the service point stated above.

TARGA GmbH
Coesterweg 45
DE-59494 Soest
GERMANY