

# AROMA®

## PROFESSIONAL

# Instruction Manual

Rice Cooker • Food Steamer • Slow Cooker



**Questions or concerns about your rice cooker?**

*Before returning to the store...*



Aroma's customer service experts are happy to help. Call us toll-free at **1-800-276-6286**.



Answers to many common questions and even replacement parts can be found online. Visit **[www.AromaCo.com/Support](http://www.AromaCo.com/Support)**.





Congratulations on your purchase of the Aroma® Professional™ 16-Cup Digital Rice Cooker, Food Steamer and Slow Cooker. In no time at all, you'll be making fantastic, restaurant-quality rice at the touch of a button! Whether long, medium or short grain, this cooker is specially calibrated to prepare all varieties of rice, including tough-to-cook whole grain brown rice, to fluffy perfection.

In addition to rice, your new Aroma® Professional™ Rice Cooker is ideal for healthy, one-pot meals for the whole family. The convenient steam tray inserts directly over the rice, allowing you to cook moist, fresh meats and vegetables at the same time, in the same pot. Steaming foods locks in their natural flavor and nutrients without added oil or fat, for meals that are as nutritious and low-calorie as they are easy.

Aroma®'s Sauté-Then-Simmer™ Technology is ideal for the easy preparation of Spanish rice, risottos, pilafs, packaged meal helpers, stir fries and more stovetop favorites! The Slow Cook function adds an extra dimension of versatility to your rice cooker, allowing it to fully function as a programmable slow cooker! Use them together for simplified searing and slow cooking in the same pot.

But it doesn't end there. Your new rice cooker is also great for soups, stews, stocks, gumbos, jambalaya, breakfast frittatas, dips and even desserts!

Several delicious recipes are included at the back of this manual, and even more are available online at **www.AromaCo.com**. This manual contains instructions for using your rice cooker and its convenient pre-programmed digital settings, as well as all of the accessories included. There are also helpful measurement charts for cooking rice and steaming.

For more information on your Aroma® Professional™ Rice Cooker, Food Steamer and Slow Cooker or for product service, recipes and other home appliance solutions, please visit us online at **www.AromaCo.com**.

**See what's cooking with Aroma online!**



[www.AromaTestKitchen.com](http://www.AromaTestKitchen.com)



[www.facebook.com/AromaHousewares](https://www.facebook.com/AromaHousewares)



[www.twitter.com/AromaHousewares](https://www.twitter.com/AromaHousewares)



[www.pinterest.com/AromaHousewares](https://www.pinterest.com/AromaHousewares)



Published By:  
Aroma Housewares Co.  
6469 Flanders Drive  
San Diego, CA 92121  
U.S.A.

1-800-276-6286

[www.AromaCo.com](http://www.AromaCo.com)

©2014 Aroma Housewares Company  
All rights reserved.





# IMPORTANT SAFEGUARDS

*Basic safety precautions should always be followed when using electrical appliances, including the following:*

- 1. Important: Read all instructions carefully before first use.**
2. Do not touch hot surfaces. Use the handles or knobs.
3. Use only on a level, dry and heat-resistant surface.
4. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or the appliance in water or any other liquid. See instructions for cleaning.
5. Close supervision is necessary when the appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Aroma® customer service for examination, repair or adjustment.
8. The use of accessory attachments not recommended by Aroma® Housewares may result in fire, electrical shock or injury.
9. Do not use outdoors.
10. Do not let cord touch hot surfaces or hang over the edge of a counter or table.
11. Do not place on or near a hot gas or electric burner or in a heated oven.
12. Do not use the appliance for other than its intended use.
13. Extreme caution must be used when moving the appliance containing rice, hot oil or other hot liquids.
14. Do not touch, cover or obstruct the steam vent on the top of the rice cooker as it is extremely hot and may cause scalding.
15. Use only with a 120V AC power outlet.
16. Always unplug from the base of the wall outlet. Never pull on the cord.
17. The rice cooker should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances, the appliance may not operate properly.
18. Always make sure the outside of the inner cooking pot is dry prior to use. If the inner pot is returned to the cooker when wet, it may damage or cause the product to malfunction.
19. Use extreme caution when opening the lid during or after cooking. Hot steam will escape and may cause scalding.
20. Rice should not be left in the inner cooking pot with the Keep-Warm function on for more than 12 hours.
21. To prevent damage or deformation, do not use the inner cooking pot on a stovetop or burner.
22. To disconnect, turn any control to OFF, then remove the plug from the wall outlet.
23. To reduce the risk of electrical shock, cook only in the removable inner cooking pot provided.

 
## SAVE THESE INSTRUCTIONS



# IMPORTANT SAFEGUARDS

## Short Cord Instructions

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
  - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
  - b. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.

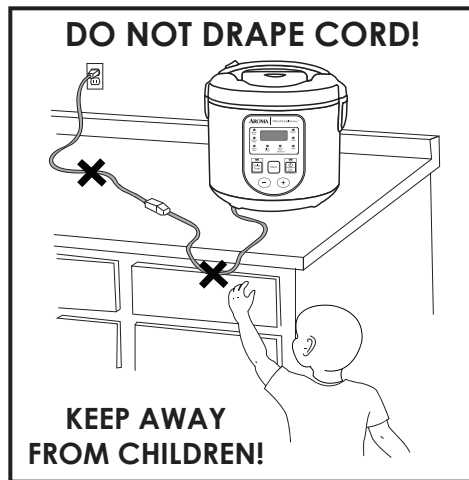

## Polarized Plug

This appliance has a **polarized plug** (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

 
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.



# PARTS IDENTIFICATION



Inner Cooking Pot

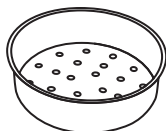

Steam Tray



Measuring Cup



Serving Spatula

## Digital Controls



### POWER/KEEP-WARM

The POWER/KEEP WARM button serves two purposes. One press of the POWER/KEEP WARM button will turn the rice cooker on. A second press will set the rice cooker to its Keep-Warm setting.



### DELAY TIMER

The DELAY TIMER sets up to 15 hours for rice ready when it's needed. Add rice and water in the morning and set the timer for mealtime at night.



The **MENU** button allows the rice cooker to be set to one of its 8 specialized cooking functions: White Rice, Brown Rice, Quick Rice, Slow Cook, Sauté-Then-Simmer™, Cake, Soup and Steam.



White Rice

The **WHITE** function cooks restaurant-quality white rice automatically.



Brown Rice

The **BROWN** function is ideal for cooking brown rice and other tough-to-cook whole grains to perfection.



Quick Rice

The **QUICK RICE** button is a great time-saving option for rice in a pinch. This setting foregoes the rice cooker's Sensor Logic™ for faster cooking times, although cooked rice will not be to the same quality of the White Rice and Brown Rice functions.



Slow Cook

The **SLOW COOK** button sets to slow cook from 2 to 10 hours and is great for homemade roasts and stews.



Sauté then Simmer™

Aroma's patent-pending **Sauté-Then-Simmer™** (STS™) Technology will sauté foods at a high heat and automatically switch over to its simmer mode once liquid is added.



Cake

The **CAKE** function "bakes" cakes and other treats.



Soup

The **SOUP** function is great for preparing savory soups and delicious stews.



Steam

The **STEAM** button is perfect for healthy sides and main courses. Set the time food needs to steam, it will begin to countdown once water reaches a boil and shut off once time has elapsed.



# BEFORE FIRST USE

## 1. Read all instructions and important safeguards.

2. Remove all packaging materials and check that all items have been received in good condition.
3. Tear up all plastic bags as they can pose a risk to children.
4. Wash steam vent and all other accessories in warm, soapy water. Rinse and dry thoroughly.
5. Remove the inner cooking pot from rice cooker and clean with warm, soapy water. Rinse and dry thoroughly before returning to cooker.
6. Wipe body clean with a damp cloth.



### NOTE

- Do not use abrasive cleaners or scouring pads.
- Do not immerse the rice cooker base, cord or plug in water at any time.



### HELPFUL HINTS

 


The provided rice cooker cup is the equivalent to a  $\frac{3}{4}$  standard US cup.



# TO COOK RICE

1

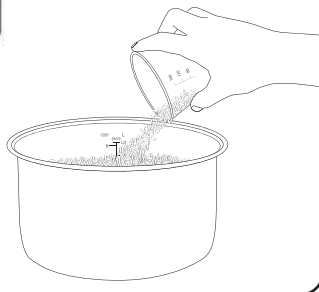


Using the provided measuring cup, add rice to the inner cooking pot.

2



Rinse rice to remove excess starch. Drain.

 3

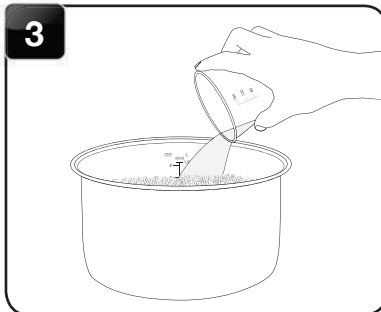


Fill with water to the line which matches the number of cups of rice being cooked.

4




Place the inner cooking pot into the rice cooker.

 5

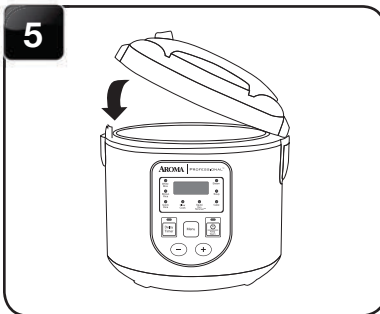

Close the lid securely.

 6

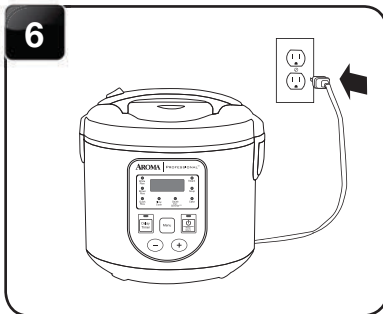

Plug the power cord into a wall outlet.



## NOTE

- Before placing the inner cooking pot into the rice cooker, check that it is dry and free of debris. Adding the inner cooking pot when wet may damage the rice cooker.



 
## HELPFUL HINTS

- If you misplace the measuring cup, a  $\frac{3}{4}$  standard US cup is an exact replacement.
- To add more flavor to rice, try substituting a favorite meat or vegetable broth or stock. The ratio of broth/stock to rice will be the same as water to rice.
- For approximate rice cooking times and suggested rice/water ratios, see the "Rice/Water Measurement Table" on **page 7**.




## TO COOK RICE (CONT.)

7

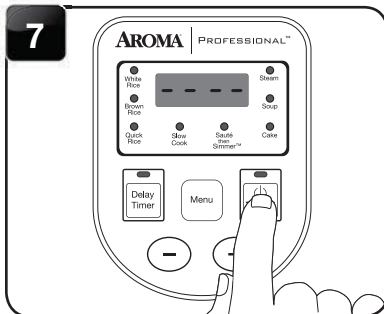


Press the **POWER/KEEP WARM** button to turn on the rice cooker.

 8

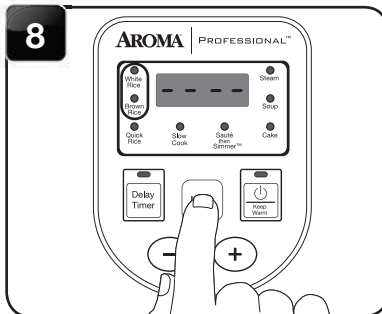


Press **MENU** to navigate to the **White Rice** or **Brown Rice** function, depending upon the type of rice being cooked.

 9

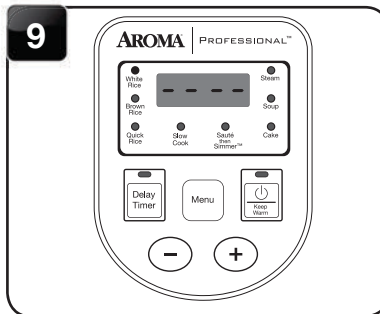


The rice cooker will now begin cooking. The cooking indicator light will illuminate.

 10

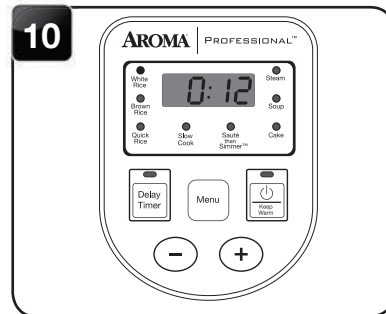

The rice cooker will countdown the final **12 minutes (White Rice)** and **25 minutes (Brown Rice)** of cook time.

 11

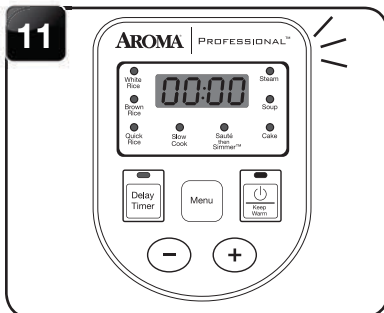


Once rice is finished, the rice cooker will beep and automatically switch to **Keep-Warm**.

12



For better results, stir the rice with the serving spatula to distribute any remaining moisture.

 13

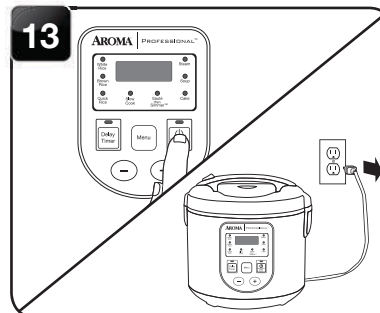

When finished serving rice, turn the rice cooker off by pressing the **POWER/KEEP WARM** button twice and unplug the power cord.



### NOTE

- Brown rice requires a much longer cooking cycle than other rice varieties due to the extra bran layers on the grains. The Brown Rice function on this rice cooker allows extra time and adjusted heat settings in order to cook the rice properly. If it appears the rice cooker is not heating up immediately on the Brown Rice setting, this is due to a low-heat soak cycle that precedes the cooking cycle to produce better brown rice results.
- Rice should not be left in the rice cooker on Keep-Warm for more than 12 hours.





# RICE/WATER MEASUREMENT TABLE

UNCOOKED RICE	RICE WATER LINE INSIDE POT	APPROX. COOKED RICE YIELD	COOKING TIMES
2 Rice Cooker Cups*	Line 2	4 Rice Cooker Cups*	<b>WHITE RICE:</b> 30-35 Min. <b>BROWN RICE:</b> 65-70 Min.
3 Rice Cooker Cups*	Line 3	6 Rice Cooker Cups*	<b>WHITE RICE:</b> 33-38 Min. <b>BROWN RICE:</b> 75-80 Min.
4 Rice Cooker Cups*	Line 4	8 Rice Cooker Cups*	<b>WHITE RICE:</b> 38-43 Min. <b>BROWN RICE:</b> 80-85 Min.
5 Rice Cooker Cups*	Line 5	10 Rice Cooker Cups*	<b>WHITE RICE:</b> 40-45 Min. <b>BROWN RICE:</b> 85-90 Min.
6 Rice Cooker Cups*	Line 6	12 Rice Cooker Cups*	<b>WHITE RICE:</b> 43-48 Min. <b>BROWN RICE:</b> 88-93 Min.
7 Rice Cooker Cups*	Line 7	14 Rice Cooker Cups*	<b>WHITE RICE:</b> 45-50 Min. <b>BROWN RICE:</b> 90-95 Min.
8 Rice Cooker Cups*	Line 8	16 Rice Cooker Cups*	<b>WHITE RICE:</b> 47-52 Min. <b>BROWN RICE:</b> 92-97 Min.

\* Cups referenced are with the included measuring cup. The measuring cup included adheres to rice cooker industry standards and is not equal to a standard U.S. measuring cup. The included measuring cup is equal to a standard  $\frac{3}{4}$  US cup.



## HELPFUL HINTS

- Rinse rice before placing it into the inner pot to remove excess bran and starch. This will help reduce browning and sticking to the bottom of the pot.
- Want perfect brown rice without the wait? Use the Delay Timer. Simply add rice and water in the morning and set the Delay Timer to the number of hours when rice will be needed. See “To Use Delay Timer” on **page 10** for instructions.
- This chart is only a general measuring guide. As there are many different kinds of rice available (see “About Rice” on **page 24**), rice/water measurements may vary.

**\*1 Rice Cooker Cup =  $\frac{3}{4}$  US Cups**



# TO USE QUICK RICE

*The rice produced by Quick Rice will not be to the same quality as rice made using the White Rice or Brown Rice settings, but it's an excellent option for cooked rice in a pinch.*

***To use the Quick Rice function, follow the steps for “To Cook Rice” beginning on page 5. Rather than pressing one of the standard rice function buttons, press the QUICK RICE button.  
If cooking brown rice, add an additional 1½ cups water, using the provided measuring cup, to compensate for the lack of soaking time. The included measuring cup is equal to a standard ¾ US cup.***

WHITE RICE UNCOOKED CUPS*	COOKING TIME WITH QUICK RICE FUNCTION	APPROX. TIME SAVINGS COMPARED TO WHITE RICE FUNCTION	BROWN RICE UNCOOKED CUPS*	COOKING TIME WITH QUICK RICE FUNCTION	APPROX. TIME SAVINGS COMPARED TO BROWN RICE FUNCTION
2 Rice Cooker Cups*	17-22 Min.	15 Min.	2 Rice Cooker Cups*	38-43 Min.	25 Min.
4 Rice Cooker Cups*	22-27 Min.	15 Min.	4 Rice Cooker Cups*	44-49 Min.	35 Min.
6 Rice Cooker Cups*	27-32 Min.	15 Min.	6 Rice Cooker Cups*	46-51 Min.	40 Min.
8 Rice Cooker Cups*	30-35 Min.	10 Min.	8 Rice Cooker Cups*	52-57 Min.	40 Min.

\* Cups referenced are with the included measuring cup. The measuring cup included adheres to rice cooker industry standards and is not equal to a standard U.S. measuring cup. If cooking brown rice, add an additional 1½ cups water, using the provided measuring cup, to compensate for the lack of soaking time.

**The included measuring cup is equal to a standard ¾ US cup.**



NOTE

- Cooking times are approximate. Altitude, humidity and outside temperature will affect cooking time.
- Opening the lid during the cooking cycle causes a loss of heat and steam. Cooking time may be prolonged if the lid is opened before the rice is finished.

 
**\*1 Rice Cooker Cup = ¾ US Cups**



# TO USE THE DELAY TIMER


*Follow steps 1 to 7 of “To Cook Rice” beginning on page 5.*

8

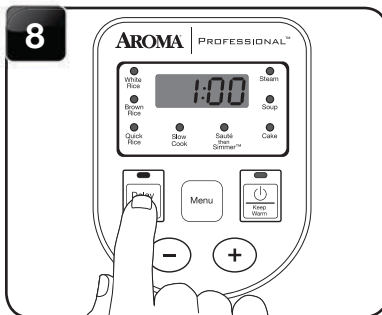


**Press the DELAY TIMER button. Each press increases in half an hour increments. It may be set to have rice ready in 1 to 15 hours. The time selected will indicate when cooking will be complete.**

 9

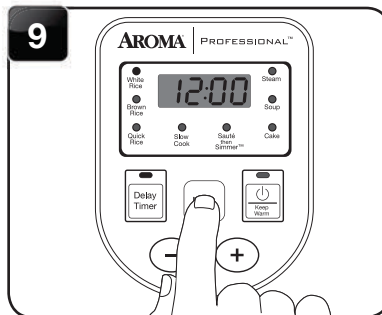


**Once the needed time is selected, press the MENU button to select White Rice or Brown Rice functions depending on the rice being cooked.**

 10

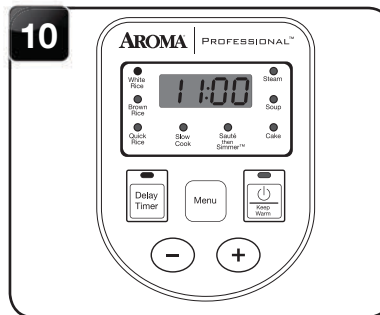

**The digital display will countdown from the time selected.**

 11

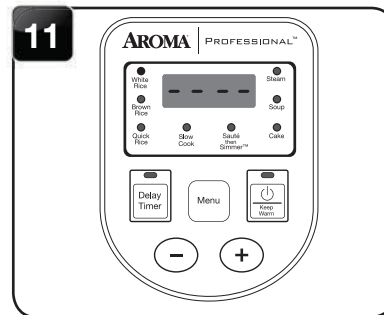

**Once rice begins cooking, the cooking indicator light will illuminate.**



## NOTE

 
- Due to the longer cooking time needed, brown rice may only be delayed for 2 hours or more.




## HELPFUL HINTS

- If you misplace the measuring cup, a  $\frac{3}{4}$  standard US cup is an exact replacement.
- To add more flavor to rice, try substituting a favorite meat or vegetable broth or stock. The ratio of broth/stock to rice will be the same as water to rice.


## 15 TO USE THE DELAY TIMER (CONT.)

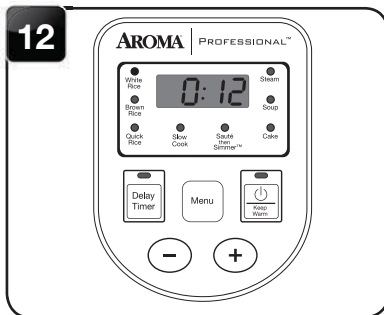

 
The rice cooker will countdown the final 12 minutes of cook time.

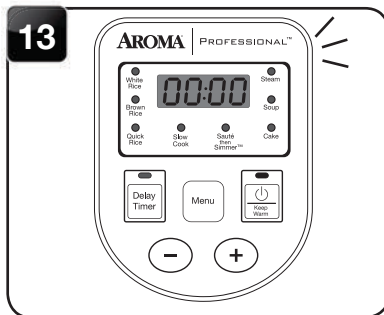

 Once rice is finished, the rice cooker will beep and automatically switch to Keep-Warm.

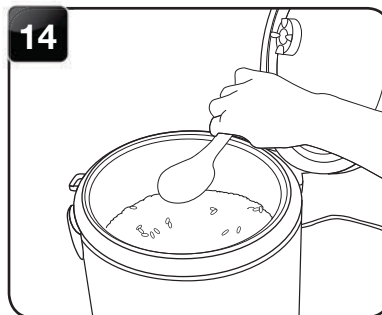

 For better results, stir the rice with the serving spatula to distribute any remaining moisture.

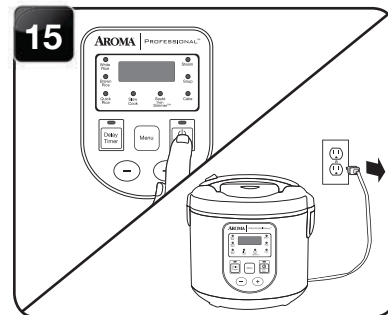

When finished serving rice, turn the rice cooker off by pressing the POWER/KEEP WARM button twice and unplug the power cord.




NOTE

- Rice should not be left in the rice cooker on Keep-Warm for more than 12 hours.




# TO SLOW COOK

 1

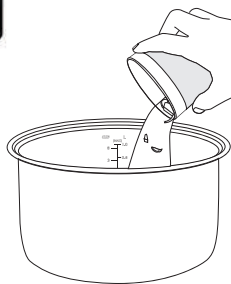

Add food to be slow cooked to the inner cooking pot.

 2

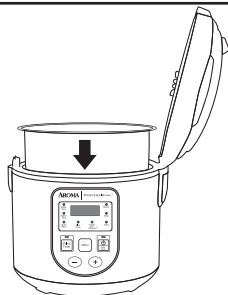


Place the inner cooking pot into the rice cooker.

3



Close the lid securely.

 4

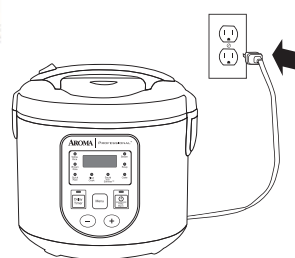

Plug the power cord into an available outlet.

5



Press the **POWER/KEEP WARM** button to turn the rice cooker on.

6



Press the **MENU** button to select the Slow Cook function. The digital display will show a flashing 2:00 to represent two hours of slow cook time.




## NOTE

 - The Slow Cook function operates as a traditional “High” Slow Cook function.
- Before placing the inner cooking pot into the rice cooker, check that the cooking pot is dry and free of debris. Adding the inner cooking pot when wet may damage the rice cooker.
- If recipe calls for ingredients to be seared or browned use Saute-Then-Simmer™ to sear meat then switch to Slow Cook to finish cooking.



## TO SLOW COOK (CONT.)

7

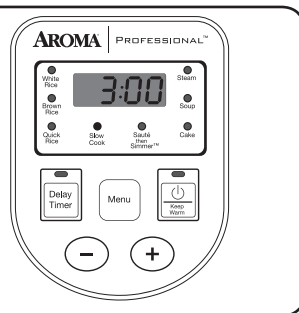


Use the UP + or DOWN - buttons to set the time. These buttons will adjust slow cook time by 30 minutes, up to 10 hours.

8




Once the needed cooking time is selected, the rice cooker will beep to indicate it is setting at the displayed time. It will beep once more and the display will stop flashing to indicate it has set.

 9

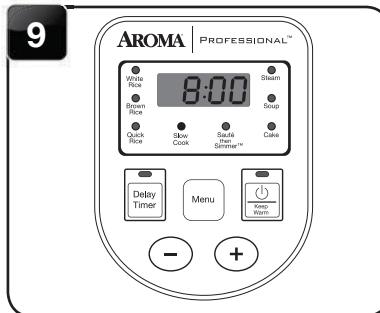


The rice cooker will begin to slow cook. The digital display will countdown from the selected time.

 10

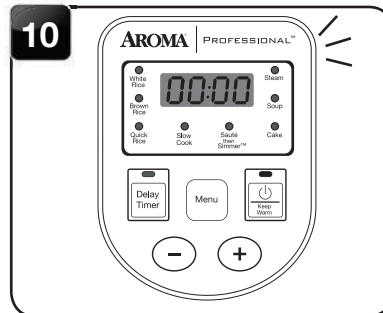


Once the selected time has passed, the rice cooker will beep and automatically switch to Keep-Warm.

 11

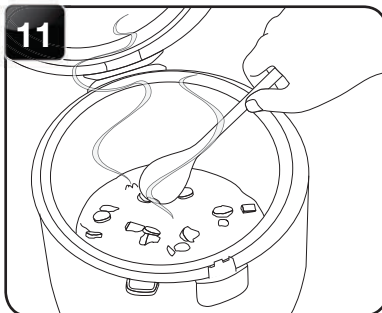

Open the lid to check food for doneness. If fully cooked, remove food for serving.

 12

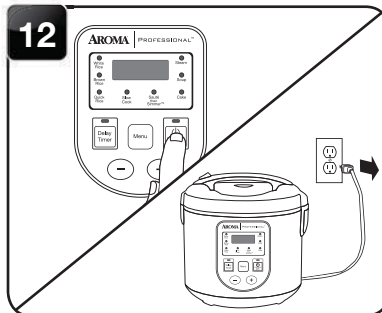


When finished serving, turn the rice cooker off by pressing the POWER/KEEP WARM button and unplug the power cord.




# TO USE SAUTÉ-THEN-SIMMER™

 1

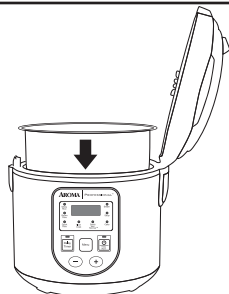


Place the inner cooking pot into the rice cooker and close the lid.

 2

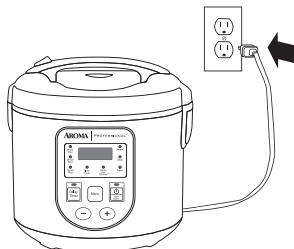


Plug the power cord into an available outlet.

 3

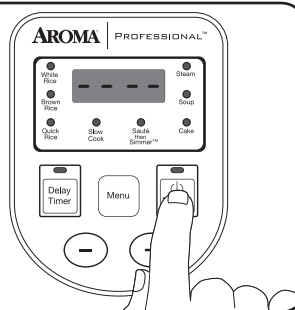

Press the **POWER/KEEP WARM** button to turn on the rice cooker.

 
4

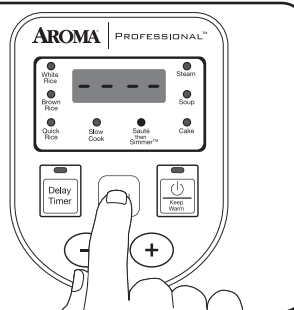

Press the **MENU** button to select the **Sauté-Then-Simmer™** function to begin sautéing and allow the cooker to preheat for 5 minutes.



 
CAUTION

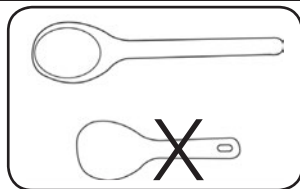


- **Do not use the provided serving spatula to sauté.** It is not intended to be used in contact with high temperatures. Use a long-handled wooden or heat-safe spoon to stir food while sautéing.




## TO USE SAUTÉ-THEN-SIMMER™ (CONT.)

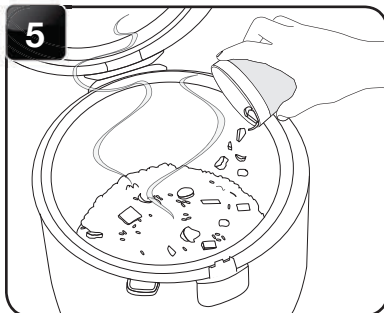 

 
**5** Add ingredients to be sautéed/  
browned to the inner cooking pot.

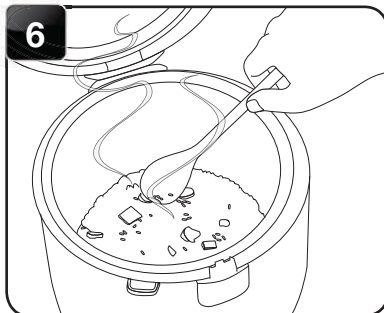

 
**6** Using a long-handled wooden  
spoon, stir ingredients until sautéed/  
browned to the desired level. **DO NOT**  
use included serving spatula while  
sautéing.

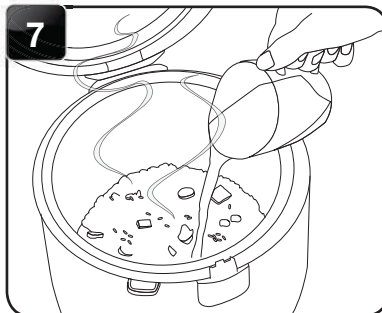

 
**7** Add other called for ingredients and  
liquid to the inner cooking pot.

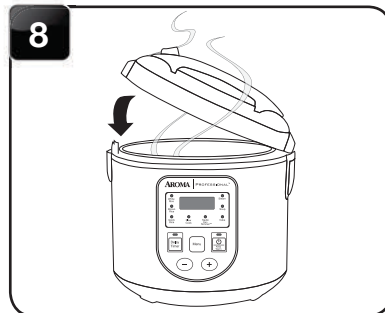

 **8** Close the lid securely and allow the  
rice cooker to cook.

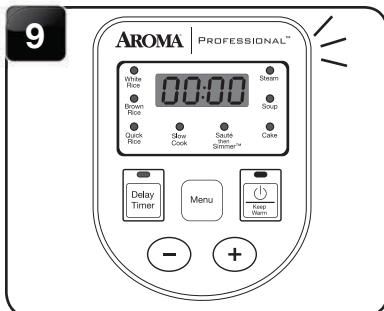

 **9** Once the meal has cooked, the rice  
cooker will beep and automatically  
switch over to Keep-Warm.

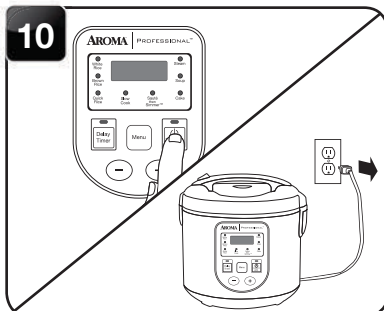


**10** When finished serving, turn the rice  
cooker off by pressing the POWER/  
KEEP WARM button twice and  
unplug the power cord.






# TO SAUTÉ ONLY

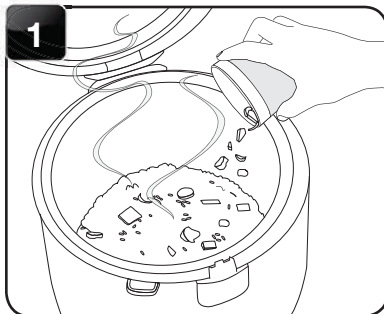 


**1** Add ingredients to be sautéed/  
browned to the inner cooking pot.



 **2** Place the inner cooking pot into the  
rice cooker and close the lid.

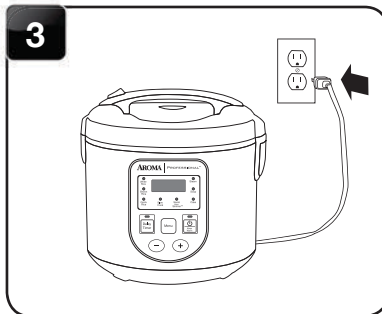

 
**3** Plug the power cord into an available  
outlet.

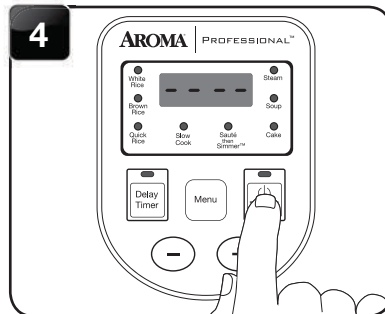

**4** Press the **POWER/KEEP WARM**  
button to turn on the rice cooker.



**CAUTION**

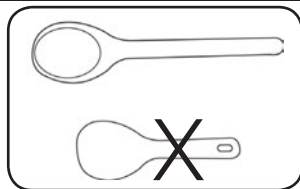 


- **Do not use the provided serving spatula to sauté.** It is not intended to be used in contact with high temperatures. Use a long-handled wooden or heat-safe spoon to stir food while sautéing.




## TO SAUTÉ ONLY (CONT.)

 5

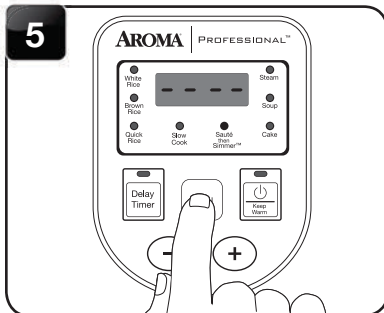


Press the MENU button to select the Sauté-Then-Simmer™ function to begin sautéing and allow the cooker to preheat for 5 minutes.

 6

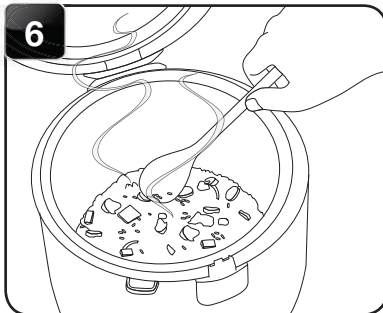


Using a long-handled wooden spoon, stir ingredients until sautéed/browned to the desired level.

 7

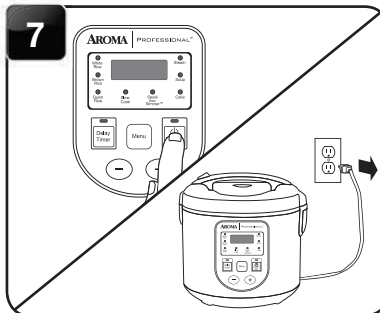

When finished sautéing, turn the rice cooker off by pressing the POWER/KEEP WARM button twice and unplug the power cord.


# TO STEAM

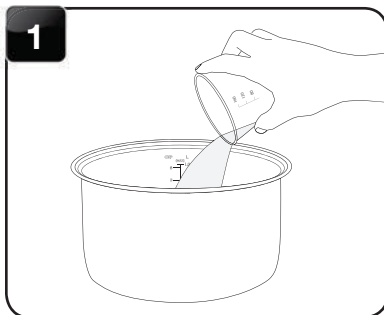 


**1** Using the provided measuring cup, add 3 rice cooker cups of water to the inner cooking pot.



 **2** Place the inner cooking pot into the rice cooker.

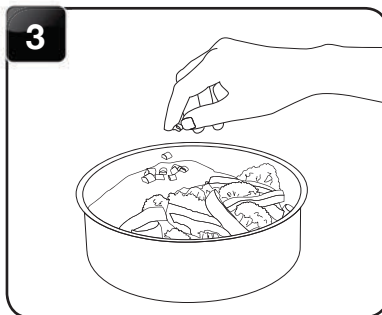

 
**3** Place food to be steamed onto the steam tray.

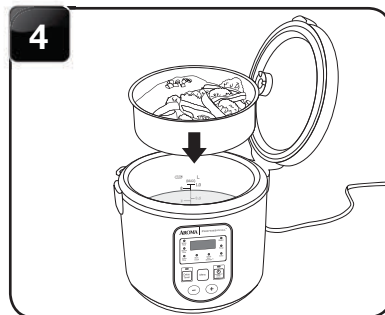


**4** Place the steam tray into the rice cooker.



 **5** Close the lid securely.

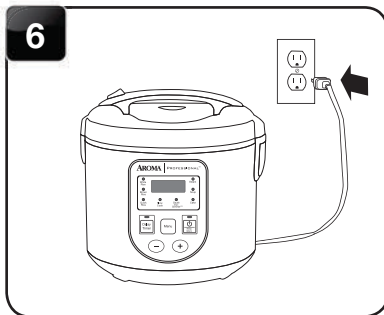

 **6** Plug the cord into an available outlet.

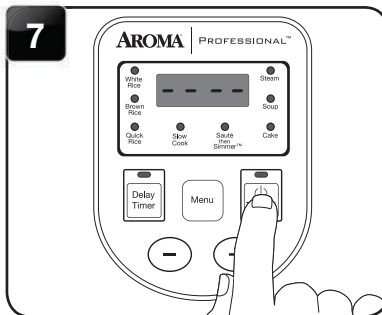

**7** Press the **POWER/KEEP WARM** button to turn on the rice cooker.




## HELPFUL HINTS

 - Smaller foods may be placed on a heat-proof dish and then placed onto the steam tray. Parchment paper or aluminum foil may be used as well. Place the paper/foil in the center of the steam tray and ensure it does not create a seal along the bottom of the steam tray. For best results, it is recommended to puncture small holes in the paper/foil.
- For suggested steaming times and water amounts, see the meat and vegetable steaming tables on **page 21**.




## TO STEAM (CONT.)

8

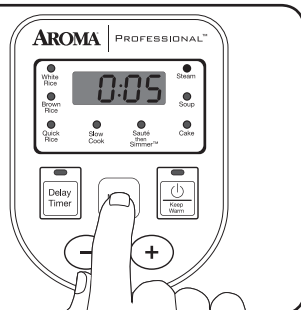

Press the **MENU** button to select the **Steam** function. The digital display will show a flashing 0:05 to represent 5 minutes of steam time.

 9

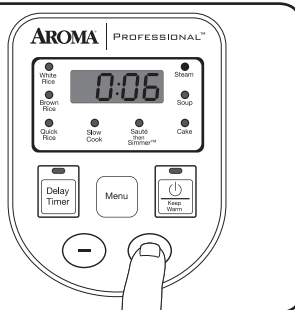


Use the **UP +** or **DOWN -** buttons to set the time. These buttons will adjust steam time by 1 minute, up to 60 minutes.

10




Once the needed time is selected, the rice cooker will beep to indicate it is setting at the displayed time.

 11

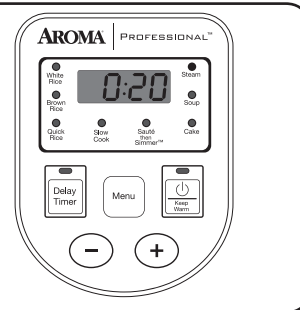


The steam indicator light will illuminate to indicate it has begun steaming.

 12

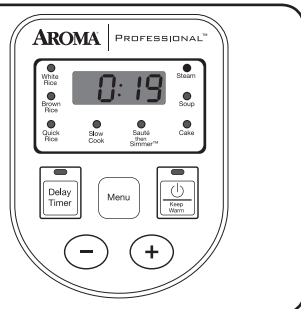

Once the water reaches a boil, the digital display will countdown in one minute increments from the selected time.

 13

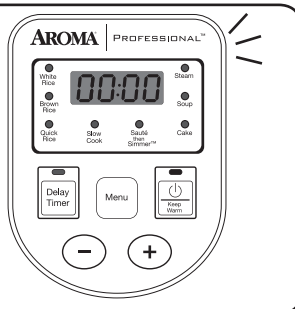


Once the selected time has passed, the rice cooker will beep and switch to **Keep-Warm**.

14



Check steamed food for doneness. If finished steaming, use a hot pad or oven mitt and remove food immediately to avoid overcooking.

 15

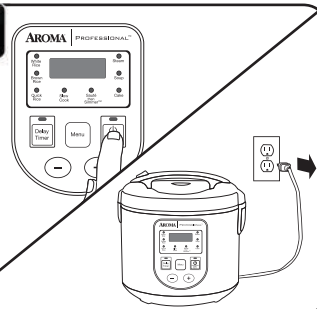


When finished steaming, turn the rice cooker off by pressing the **POWER/KEEP WARM** button twice and unplug the power cord.



# TO STEAM FOOD & SIMULTANEOUSLY COOK RICE

 
*Follow steps 1 to 9 of “To Cook Rice” beginning on page 5.*

10

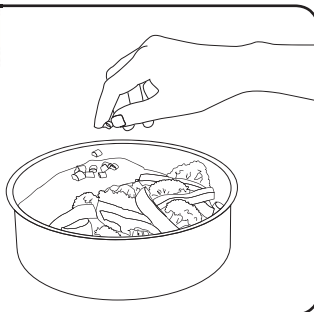

Place food to be steamed onto the steam tray.

 11

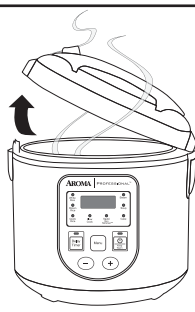

Using caution to avoid escaping steam, open the lid.

12



Place steam tray into the rice cooker.

13



Close the lid securely.



NOTE

- Do not attempt to cook more than **6 cups (uncooked)** of rice if steaming and cooking rice simultaneously.
- It is possible to steam at any point during the rice cooking cycle. However, it is recommended that you steam during the end of the cycle so that steamed food does not grow cold or become soggy before the rice is ready.



HELPFUL  
HINTS


- Refer to the steaming tables for meats and vegetables on **page 21** for hints and approximate steaming times. See the “Rice/Water Measurement Table” included on **page 7** for approximate rice cooking times.




## TO STEAM FOOD & SIMULTANEOUSLY COOK RICE (CONT.)



 
Using caution, open the lid to check food for doneness. **CAUTION:** Steam will be hot.

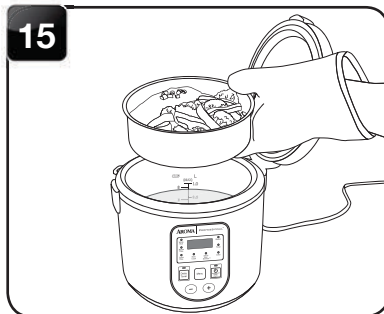

 
If food is finished steaming, remove steam tray using a hot pad or oven mitt.

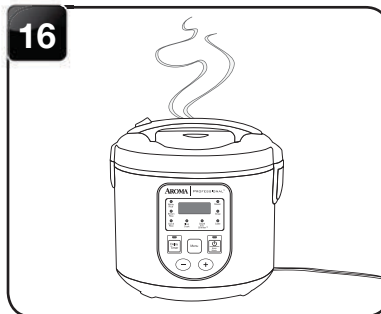

 
Allow the rice cooker to continue cooking rice.

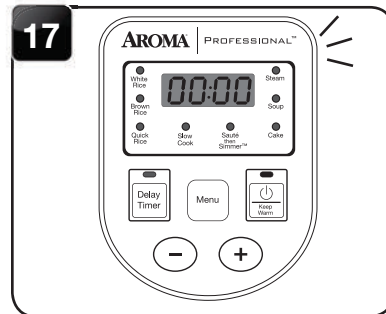

 Once rice is finished, the rice cooker will beep and automatically switch to Keep-Warm.

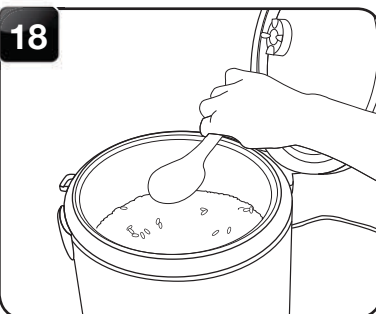

 For best results, stir the rice with the serving spatula to distribute any remaining moisture.

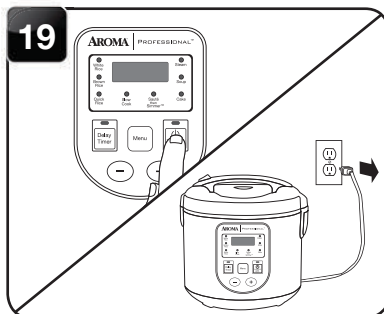

When finished serving rice, turn the rice cooker off by pressing the **POWER/KEEP WARM** button twice and unplug the power cord.



NOTE

- Rice should not be left in the rice cooker on Keep-Warm for more than 12 hours.



# STEAMING TABLES

*When steaming, Aroma® recommends using 3 rice cooker cups of water with the provided measuring cup.*

## Meat Steaming Table

MEAT	STEAMING TIME	SAFE INTERNAL TEMPERATURE
Fish	25 Min.	140°
Chicken	30 Min.	165°
Pork	30 Min.	160°
Beef	Medium = 25 Min. Medium-Well = 30 Min. Well = 33 Min.	160°



### HELPFUL HINTS

- Since most vegetables only absorb a small amount of water, **there is no need to increase the amount of water with a larger serving of vegetables.**
- Steaming times may vary depending upon the cut of meat being used.
- To ensure meat tastes its best, and to prevent possible illness, check that meat is completely cooked prior to serving. If it is not, simply place more water in the inner cooking pot and repeat the cooking process until the meat is adequately cooked.



### NOTE

 
- Altitude, humidity and outside temperature will affect cooking times.
- These steaming charts are for reference only. Actual cooking times may vary.

## Vegetable Steaming Table

VEGETABLE	STEAMING TIME
Asparagus	9-11 Minutes
Broccoli	6-8 Minutes
Cabbage	5-7 Minutes
Carrots	11-13 Minutes
Cauliflower	7-9 Minutes
Corn on the Cob	12-16 Minutes
Green Beans	9-11 Minutes
Peas	4-6 Minutes
Potatoes	28-33 Minutes
Spinach	2-4 Minutes
Squash	9-11 Minutes
Zucchini	9-11 Minutes



# TO COOK SOUPS, STEWS OR CHILIS

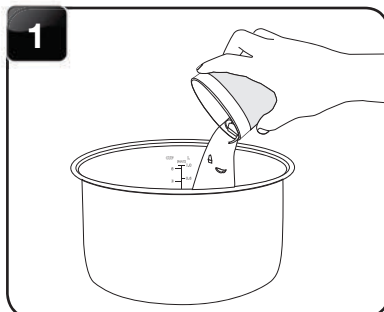


**1** Add ingredients to the inner cooking pot.



**2** Place the inner cooking pot into the rice cooker.



 **3** Close the lid securely.

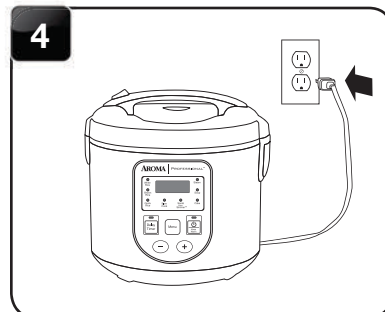

**4** Plug the cord into an available outlet.




CAUTION

- The rice cooker will not switch to Keep-Warm until all liquid is boiled away. Follow the recipe carefully and **do not leave the rice cooker unattended.**







## TO COOK SOUPS, STEWS AND CHILIS (CONT.)

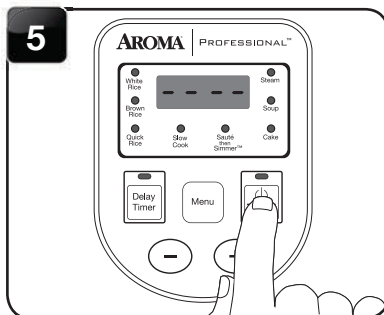 

 
Press the **POWER/KEEP WARM** button to turn on the rice cooker.

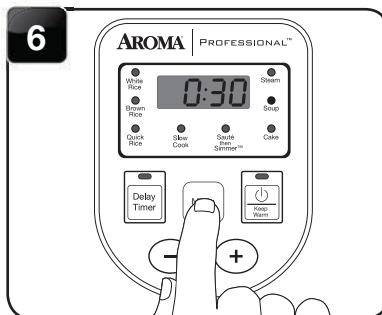

 
Press the **MENU** button to select the Soup function. The display will flash 0:30 indicating the 30 minute default cook time.

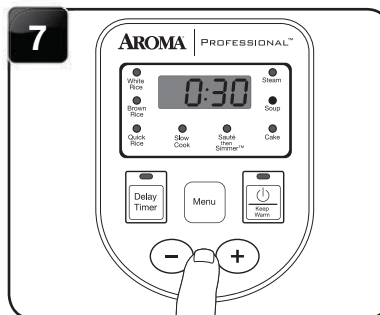

 
Use the **UP +** or **DOWN -** buttons to set the time. These buttons will adjust the soup time by 5 minutes. Cook time can be set between 10 minutes and 2 hours.

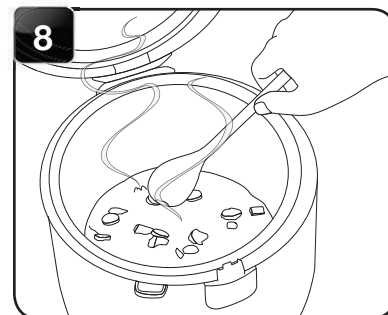

 Using caution to avoid escaping steam, open the lid and stir occasionally with a long-handled wooden spoon.

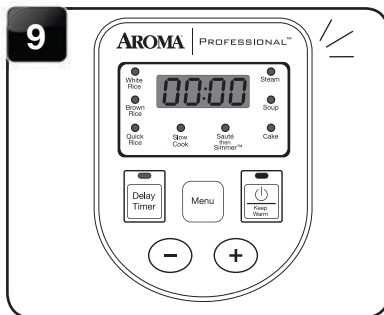

 Once cooking is complete, press the **POWER/KEEP WARM** button to switch the rice cooker to Keep-Warm.

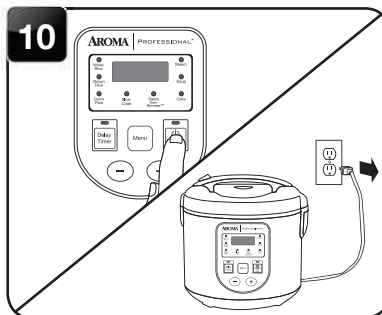


When finished serving, turn the rice cooker off by pressing the **POWER/KEEP-WARM** button twice and unplug the power cord.




# TO USE THE CAKE FUNCTION

 1

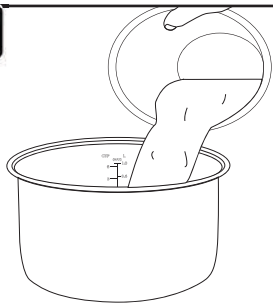

Follow instructions on cake mix packaging or recipe to mix liquid ingredients and cake mix. Add cake mix into the inner pot.

 2

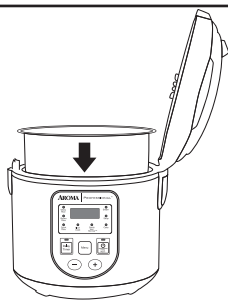


Place the inner cooking pot into the rice cooker.

3




Close the lid securely.

 4

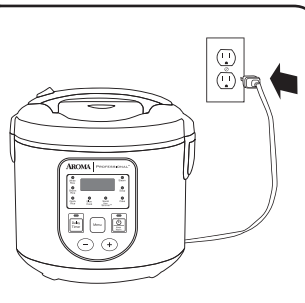


Connect the power cord to the rice cooker and plug into an available outlet.

 5

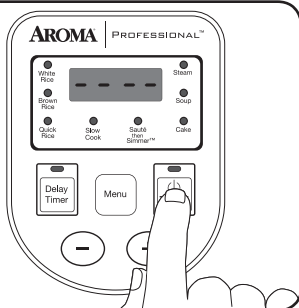

Press the **POWER/KEEP WARM** button to turn the rice cooker on.

 6

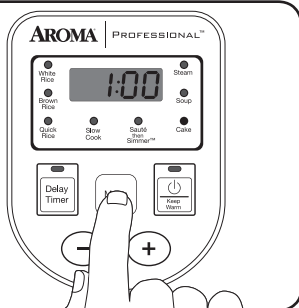

Press the **MENU** button to cycle to the **Cake** function. The display will flash 0:50 indicating the 50 minute default cook time




**NOTE**

 
- Before placing the inner cooking pot into the rice cooker, check that the cooking pot is dry and free of debris. Adding the inner cooking pot when wet may damage the rice cooker.




## TO USE THE CAKE FUNCTION (CONT.)

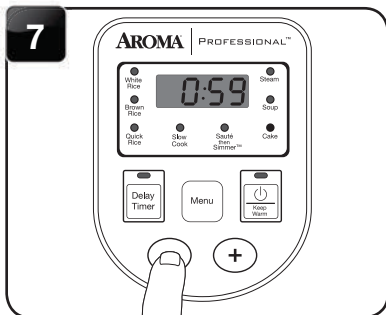

 
Use the UP + or DOWN - buttons to set the time. These buttons will adjust the cake time by 5 minutes. Cook time can be set between 5 minutes and 2 hours.

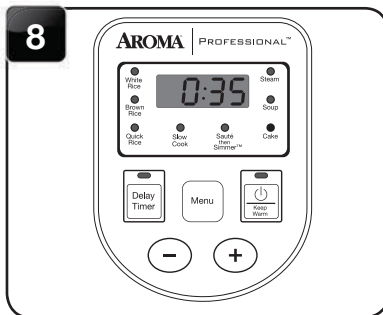

 
Once the needed time is selected, the rice cooker will beep to indicate it is setting at the displayed time.

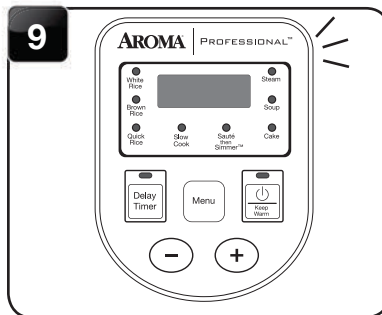

 Once cake is finished, the rice cooker will beep and switch to off.

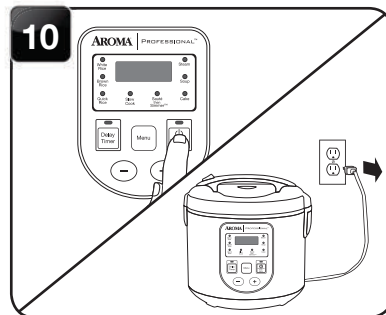

 Remove the cake carefully by inverting the inner pot onto a flat dish or surface. Turn the rice cooker off by holding the POWER/KEEP WARM until the rice cooker powers off.

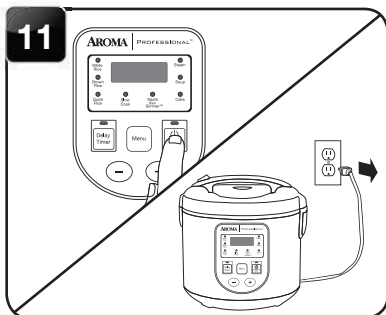

Unplug the power cord from the power outlet first, then from the rice cooker.



**NOTE**

- Cook time should be set according to package directions and adjusted as needed to reach desired doneness.

 


**HELPFUL  
HINTS**


- Check cake for doneness by placing a toothpick into the cake. If it comes out clean the cake is ready!




# TO CLEAN

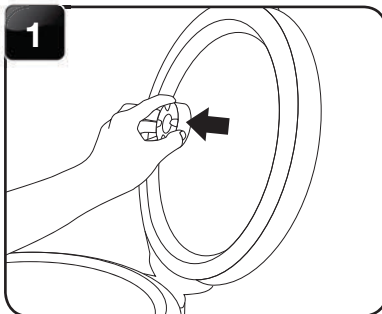


**Remove the steam vent.**

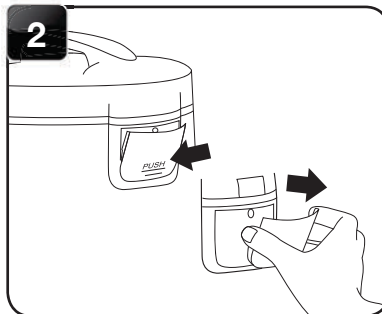 

**Remove the condensation collector.**

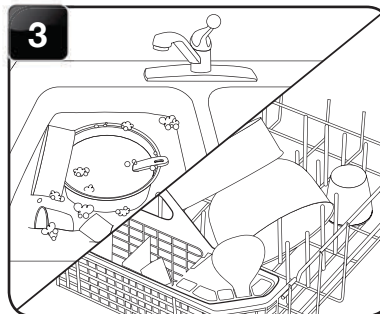 


**Soak the inner cooking pot and all accessories or wash them in the dishwasher.**

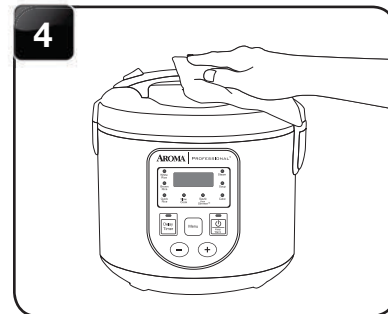 

**Wipe rice cooker body clean with a damp cloth.**



 **Thoroughly dry rice cooker body and all accessories.**

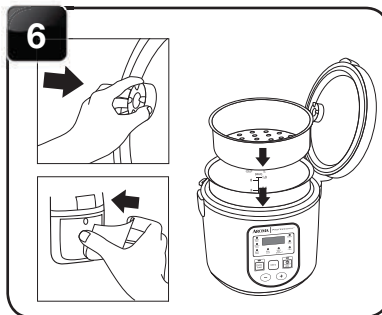

**Reassemble for next use.**



## NOTE

- Do not use harsh abrasive cleaners, scouring pads or products that are not considered safe to use on nonstick coatings.
- If washing in the dishwasher, a slight discoloration to the inner pot and accessories may occur. This is cosmetic only and will not affect performance.
- Any other servicing should be performed by Aroma® Housewares.



# TROUBLESHOOTING

*Because rice varieties may vary in their make-up, results may differ. Below are some troubleshooting tips to help you achieve the desired consistency.*

<b>Rice is too dry/hard after cooking.</b>	If your rice is dry or hard/chewy when the rice cooker switches to Keep-Warm, additional water and cooking time will soften the rice. Depending on how dry your rice is, add ½ to 1 cup of water and stir through. Close the lid and press the WHITE RICE button. When rice cooker switches to Keep-Warm, open the lid and stir the rice to check the consistency. Repeat as necessary until rice is soft and moist.
<b>Rice is too moist/soggy after cooking.</b>	If your rice is still too moist or soggy when the rice cooker switches to Keep-Warm, use the serving spatula to stir the rice. This will redistribute the bottom (moistest) part of the rice as well as release excess moisture. Close the lid and allow to remain on Keep-Warm for 10-30 minutes as needed, opening the lid and stirring periodically to release excess moisture.
<b>E2 Error</b>	This error indicated that your rice cooker is overheated. Unplug your rice cooker and allow it to cool for 20-30 minutes.



# ABOUT RICE

Courtesy of the USA Rice Federation

Rice is the perfect foundation for today's healthier eating. It is a nutrient-dense complex carbohydrate that supplies energy, fiber, essential vitamins and minerals and beneficial antioxidants. Rice combines well with other healthy foods such as vegetables, fruits, meat, seafood, poultry, beans and soy foods.

Nearly 88% of rice consumed in the U.S. is grown in the U.S. Arkansas, California, Louisiana, Texas, Mississippi and Missouri produce high-quality varieties of short, medium and long grain rice as well as specialty rices including jasmine, basmati, arborio, red aromatic and black japonica, among others.

There are many different varieties of rice available in the market. Your Aroma® Rice Cooker can cook any type perfectly every time. The following are the commonly available varieties of rice and their characteristics:

## **Long Grain Rice**

This rice has a long, slender kernel three to four times longer than its width. Due to its starch composition, cooked grains are more separate, light and fluffy compared to medium or short grain rice. The majority of white rice is enriched to restore nutrients lost during processing. Great for entrees and side dishes— rice bowls, stir-fries, salads and pilafs.

## **Medium Grain Rice**

When compared to long grain rice, medium grain rice has a shorter, wider kernel that is two to three times longer than its width. Cooked grains are more moist and tender than long grain, and have a greater tendency to cling together. Great for entrees, sushi, risotto and rice puddings.

## **Short Grain Rice**

Short grain rice has a short, plump, almost round kernel. Cooked grains are soft and cling together, yet remain separate and are somewhat chewy, with a slight springiness to the bite. Great for sushi, Asian dishes and desserts.

## **Brown Rice**

Brown rice is a 100% whole grain food that fits the U.S. Dietary Guidelines for Americans recommendation to increase daily intake of whole grains. Brown rice contains the nutrient-dense bran and inner germ layer where many beneficial compounds are found. Brown rice is available in short, medium and long grain varieties and can be used interchangeably with enriched white rice.

## **Wild Rice**

Wild rice is an aquatic grass grown in Minnesota and California and is a frequent addition to long grain rice pilafs and rice mixes. Its unique flavor, texture and rich dark color provide a delicious accent to rice dishes. Wild rice also makes a wonderful stuffing for poultry when cooked with broth and mixed with your favorite dried fruits.

---

For recipes and rice information visit the USA Rice Federation online at [www.usarice.com/consumer](http://www.usarice.com/consumer).





# ABOUT RICE

Courtesy of the USA Rice Federation

## Did You Know?

- Rice is the primary dietary staple for more than half of the world's population.
- U.S. grown rice is the standard for excellence and accounts for nearly 88% of the rice consumed in America. It is grown and harvested by local farmers in five south-central states and California.
- Rice contains no sodium, cholesterol, trans fats or gluten, and has only a trace of fat. One half-cup of rice contains about 100 calories.
- Research shows that people who eat rice have healthier diets than non-rice eaters and eat more like the U.S. Dietary Guidelines for Americans recommendations.
- Whole grains like brown rice help reduce the risk of chronic diseases such as heart disease, diabetes and certain cancers, and aid in weight management.
- Brown rice is a 100% whole grain. One cup of whole grain brown rice provides two of the three recommended daily servings of whole grains.
- Eating rice triggers the production of serotonin in the brain, a chemical that helps regulate and improve mood.
- September is National Rice Month - promoting awareness of the versatility and the value of U.S. grown rice.

---

For recipes and rice information visit the USA Rice Federation online at [www.usarice.com/consumer](http://www.usarice.com/consumer).





# RECIPES

## Sauté-Then-Simmer™ Risotto

### Ingredients

¼ cup	yellow onion, diced small
1 large	garlic clove, chopped fine
1 tbsp	olive oil
1 cup	Arborio rice, uncooked
¼ cup	vermouth
4 cups	chicken broth
1 cup	whipping cream
3 tbsp	butter
½ cup	Parmesan cheese, shredded

Press the POWER/KEEP WARM button to turn on the rice cooker. Add onion, garlic and olive oil to inner cooking pot. Press the SAUTÉ-THEN-SIMMER™ button. The sauté indicator light will illuminate. Add rice and mix with a long handled spoon until well coated. Add vermouth and stir until liquid has been absorbed. Stir in the chicken broth and whipping cream; mix well and close the lid securely. Sauté-Then-Simmer™ Technology then will automatically adjust to simmer to cook rice. Once the rice cooker automatically turns to Keep-Warm, open the lid and stir in butter and Parmesan cheese. Serves 4 to 6.

## Aromatic Pot Roast

### Ingredients

2-3 lb	beef roast
1 lb	potatoes, quartered
4	carrots, cut into chunks
2	onions, sliced
1 cup	beef broth
2	bay leaves

1. Preheat rice cooker using Sauté-Then-Simmer™.
2. Brown roast for 4-5 minutes per side.
3. Add remaining ingredients to the inner pot.
4. Switch to Slow Cook and cook for 4 hours or until tender.
5. Serve and enjoy!





# RECIPES

## Green Chile Chicken and Rice

### Ingredients

1½ cups	rice
3 cups	chicken broth
2 tbsp	diced minced onion
½ tsp	salt
1	10-oz. can chicken breast chunks, with liquid
1	4-oz. can diced green chiles, with liquid

Press the POWER/KEEP WARM button to turn on the rice cooker. Place all ingredients in the inner cooking pot and stir. Place inner cooking pot into the rice cooker, cover and press the WHITE RICE button. Allow to cook until rice cooker switches to Keep-Warm. Add salt to taste. Stir and serve immediately as a main course. Serves 4.

## Rum Cake

### Ingredients

<b>Cake:</b>	
½ box	Yellow Cake Mix of Your Choice
	Rum to Substitute for Water
<b>Glaze:</b>	
½ cup	Rum
½ cup	Butter
½ cup	Brown Sugar
⅛ cup	Water

Prepare ½ box of cake batter according to directions, but replace half of the water amount asked for with rum. Since using half of the cake mix, the water/rum ratio should also be cut in half. Rinse the inner pot and coat with a cooking spray. Add the batter and set to Cake for 50 minutes. Wait for cake cycle to finish and remove carefully by inverting onto a wire rack.

For the glaze, set your rice cooker on Sauté-Then-Simmer™ (STS™) and add water, butter, sugar and rum. Stir until sugar has dissolved and butter has melted. With a toothpick poke holes into the cake and pour the glaze on top, smoothing with a knife if needed.



## RECIPES (CONT.)

### Rice Cooker Cupcakes

#### Ingredients

1 box	Chocolate Cupcake Mix
3	Eggs
3 cups	Water
1 container	Any Flavor Frosting
6	Silicon Cupcake Molds
6	Paper Cupcake Cups

Mix cupcake mix according to box instructions. Place cupcake cups in molds. Add cupcake mix. Place cupcakes in steam tray and close the lid. Set to the Steam function according to box baking instructions (30 minutes typically). Using caution, open the lid and check cupcakes for doneness. If ready, add frosting and enjoy!

### Jambalaya

#### Ingredients

1 lb.	Spicy Smoked Sausage
1 lb.	Shrimp, Peeled and Deveined
2 cups	Cooked Chicken, Shredded
1½ cups	Rice
4 cups	Chicken Broth
1 4-oz. can	Diced Green Chilies
2 tbsp	Creole Seasoning

Cut the smoked sausage in half, lengthwise, then into 1/4" half circles. Add all ingredients to the inner pot and mix well. Place inner pot in the rice cooker and close the lid. Set to the White Rice function. The rice cooker will automatically switch to Keep-Warm mode once the meal is ready.



## RECIPES (CONT.)

### Chicken Noodle Soup

#### Ingredients

2 lbs.	Chicken Thighs
1	Yellow Onion, Cut into Small Quarters
10	Celery Stalks Cut into Bite-sized Pieces
10	Carrots Cut into Bite-sized Rounds
8 cups	Chicken Stock
2 tbsp	Olive Oil
2	Bay Leaves
2	Sprigs of Thyme
-	Salt and Pepper, for Added Taste

Add olive oil, onions and celery to the inner pot and place it inside the rice cooker. Select the Sauté-Then-Simmer™ (STS™) function and cook until fragrant or about ten minutes. Add chicken thighs and brown on both sides. Add the stock, carrots and herbs, then close the lid. Set to the Soup function and let cook. When the Soup function finishes, remove and shred the chicken with two forks and put it back in the soup. Serve with your favorite add-ons.

### Breakfast Oatmeal

#### Ingredients

¾ cup	Old-Fashioned Oatmeal
1½ cups	Milk
¼ cup	Brown Sugar
-	Dash of Salt

Set the rice cooker to its Sauté-Then-Simmer™ (STS™) function and add the milk and sugar. Stir until milk is warm and sugar has dissolved. Add salt and oatmeal. Close the lid and set to the White Rice function. Serve when oatmeal is finished cooking.



# WARRANTY

## LIMITED WARRANTY

Aroma Housewares Company warrants this product free from defects in material and workmanship for five years from provable date of purchase in the United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$22.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for a return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on the part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States.

AROMA HOUSEWARES COMPANY  
6469 Flanders Drive  
San Diego, California 92121  
1-800-276-6286  
M-F, 8:30 AM - 4:30 PM, Pacific Time  
Website: [www.AromaCo.com](http://www.AromaCo.com)

## SERVICE & SUPPORT

In the event of a warranty claim, or if service is required for this product, please contact Aroma® customer service toll-free at:

1-800-276-6286  
M-F, 8:30AM-4:30PM, Pacific Time

Or we can be reached online at [CustomerService@AromaCo.com](mailto:CustomerService@AromaCo.com).

For your records, we recommend stapling your sales receipt to this page along with a written record of the following:

Date of Purchase: \_\_\_\_\_

Place of Purchase: \_\_\_\_\_



### NOTE

- Proof of purchase is required for all warranty claims.