

AROMA®



instruction manual

AWK-080MV | AWK-080MVP

**Electric Travel Kettle
(with Control Dial)**

Questions or concerns about your Aroma product?

www.AromaCo.com/Support

1-800-276-6286

**DISCOVER
more of our
products!**



Multicookers/
Rice Cookers



Pressure Cookers



Water Kettles



Indoor Grills



Induction Cooktops

AROMA®

To Enhance and Enrich Lives.

Here at Aroma we strive to make a difference—to design and distribute products that enhance and enrich people's lives.

Aroma offers an array of exceptional products to make cooking simple and satisfying. Discover other countertop appliances and cookware from our current product lineup to complement your kitchen.

Stay connected for more recipe ideas and monthly giveaways!



www.AromaTestKitchen.com



[/AromaHousewares](https://www.instagram.com/AromaHousewares)



Published By:

Aroma Housewares Co. | 6469 Flanders Drive, San Diego, CA 92121, U.S.A.

1-800-276-6286 | www.AromaCo.com

©2019 Aroma Housewares Company | All rights reserved.



IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should always be followed, including the following:

1. Read all instructions carefully before using the appliance.
2. Do not touch hot surfaces. Use handles or knobs. Plastic surfaces become extremely hot.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or kettle in water or any other liquid. See instructions for cleaning.
4. Close supervision is necessary when the appliance is used by or near children.
5. Always unplug the appliance from the outlet when not in use and before cleaning. Allow the kettle to cool completely before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate appliance with a damaged cord or plug, or after appliance malfunctions or has been damaged in any manner. Contact Aroma® customer service for examination, repair or electrical/mechanical adjustment.
7. The use of accessory attachments not recommended by Aroma® Housewares may result in fire, electrical shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of a table or counter or to touch hot surfaces.
10. Do not place kettle on or near a hot gas or electric burner or in a heated oven.
11. To disconnect, turn any control to the "OFF" position, then remove the plug from the wall outlet.
12. Always unplug from the base of the wall outlet. Never pull on the cord.
13. Only use the kettle to heat water. No other liquids should be placed inside the kettle.
14. Do not use kettle for other than its intended use.
15. Do not unscrew any screws on the kettle or power base or attempt to disassemble them in any way.
16. Do not move kettle during the heating process.
17. Do not immerse this appliance or any of its parts in water.
18. Scalding may occur if the lid is removed during the boiling cycle.
19. **Caution:** If water exceeds the **MAX/0.6L** line, the boiled water may spill out.
20. Use only on a level, dry and heat-resistant surface.
21. The electric kettle should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances the electric kettle may not operate properly.
22. Do not open the kettle lid when in operation.

SAVE THESE INSTRUCTIONS




IMPORTANT SAFEGUARDS

Short Cord Instructions

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
 - a.) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b.) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled by children or tripped over unintentionally.

DO NOT DRAPE CORD!

**KEEP AWAY
FROM CHILDREN!**

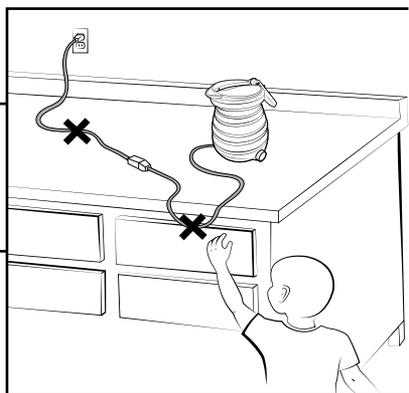

Polarized Plug


This appliance has a polarized plug (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

Parts Identification

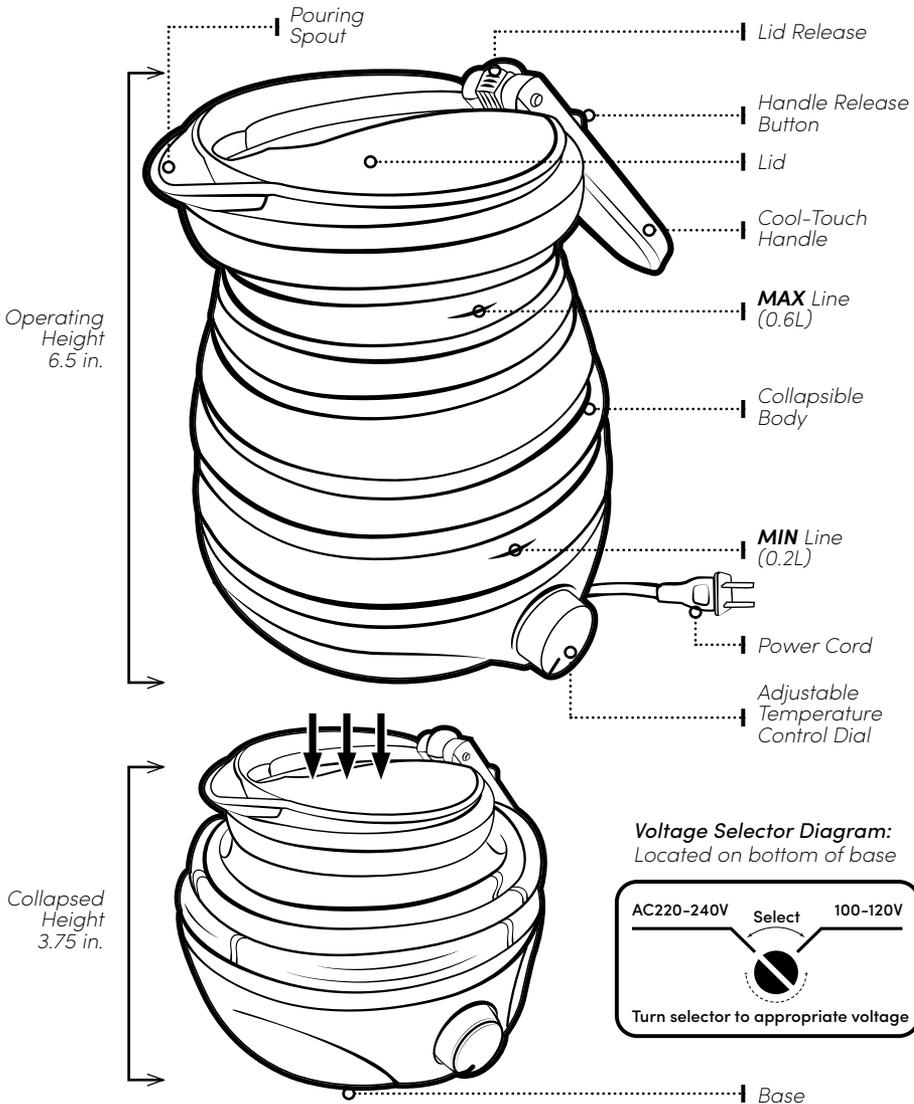

Controls/Functions

Off

Power switch with on/off indicator light.


Boil

Quickly boils 2.5 cups of water.

VOLTAGE SELECTION

1. **Before plugging into an alternating current (AC) wall outlet, ensure the appropriate voltage is selected on the base of the Electric Travel Kettle.**
2. Using a flat headed screwdriver, turn the black selector switch to choose the appropriate voltage.
- 3a. To select 120 AC voltage: turn the black **Voltage Selector** clockwise to "100-120V."
- 3b. To select 220 AC voltage: turn the **Voltage Selector** counterclockwise to "AC220-240V."

NOTE: ensure that the appropriate adapter (not supplied) is utilized when using a 220 AC circuit.

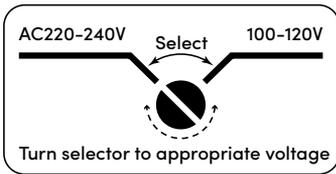

BEFORE FIRST USE

1. **Read all instructions and important safeguards.**
2. Remove all packing materials and make sure that the product has been received in good condition.
3. Take care to keep the electrical components on the exterior of the kettle dry, wipe out the interior of the kettle with a damp cloth. If your hand will not fit inside the kettle, swish warm, soapy water around in the interior of the kettle with the lid closed.
4. Rinse out the inside of the kettle thoroughly with water.
5. With a damp cloth, gently wipe off the exterior of the kettle. Do not wipe off electrical components as this may cause damage to the unit.
6. Dry all parts completely.
7. Determine if 220V AC or 120V AC supply will be used to select appropriate voltage.
8. It is recommended to run your kettle through one boiling cycle before using it to consume beverages. Following the instructions in **TO HEAT/BOIL WATER** on page 8, boil one kettle of water. When water has boiled, pour it out and rinse the inside of the kettle once more. The kettle is now ready for use.



Caution:

Before plugging unit into the wall outlet, ensure that the **Voltage Selector** located on the bottom of the unit is set to the corresponding voltage that will be supplied to the kettle. Always unplug the kettle and allow it to cool completely before cleaning.

Note:

- Never attempt to disassemble the kettle.
- Never immerse the kettle, power cord or plug in water.
- Always take care not to allow electrical components to come into contact with water.
- Do not use abrasive cleaners or scouring pads of any kind on the kettle. This will cause damage to the finish and may create a risk of electrical shock.
- Any other servicing should be performed by Aroma® Housewares.

To CLEAN

1. Ensure the kettle is unplugged from an electrical source.
2. Wipe the exterior of the kettle with a damp cloth, taking care to avoid the electrical components.
3. Clean the interior of the kettle with a soft sponge and warm, soapy water. If your hand does not fit in the lid opening, swish warm, soapy water around inside the kettle with the lid closed.
4. Rinse any remaining soapy water from the kettle.
5. Drain.
.....

TROUBLESHOOTING

The kettle and indicator light do not work.

- Make sure the kettle is connected to a functioning electrical outlet.
- If the kettle is heated with no water, the internal safety mechanism will automatically turn the kettle off. The kettle will begin working again after the internal temperature drops to a safe level. The kettle functions properly when water is added.

The water keeps boiling and does not turn off.

- By design, when set to **Max** temp, the water kettle will keep boiling water between 15-30 seconds in order to sterilize the water. If after 45 seconds the kettle remains on, manually turn the dial adjustable temperature control dial to **Off** position, unplug and call Aroma customer service.

There are mineral deposits on the interior of the kettle.

- A certain amount of scale build-up is normal after long periods of use and is caused by minerals contained in hard water. The best way to prevent mineral deposits is to always use distilled water in the kettle.
- To remove deposits, try filling the kettle halfway with water and adding a few slices of lemon, then boil. If this does not work, please see **MINERAL DEPOSITS** page 9.

Heating too slow.

- Check if voltage selector switch is properly set.

Water Overflows during boiling.

- Unplug the cord and check the water level. Ensure the level is below the **Max/0.6L** Line.
.....

Note:

· If the problem persists, please contact our customer service department toll-free at **(800) 276-6286** or through email at **CustomerService@AromaCo.com**.

Note:

· There is no need to keep the lid closed for *Auto-shutoff* to function, but it's recommend to keep the lid closed at all times during operation.

TO HEAT/BOIL WATER

1. Turn the Voltage Selector to "100-120V" to select 120 volts or turn to "AC220-240V" for 220 volts.
NOTE: Selecting 220V AC will need a power source of 220AC volts and will require a plug adapter in order for the kettle to operate.
 2. Place the kettle on a sturdy, level and dry surface.
 3. Open the kettle lid with lid release and fill with water through opening. Water must be filled between the **Min** (0.3L) and **Max** (0.6L) levels.
 4. Close the lid securely.
 5. Turn dial to desired heating or boiling setting.
 6. Plug the power cord into an available outlet.
 7. Turn the dial to **Boil** to turn it ON. The temperature dial will illuminate and the kettle will begin heating the water.
 8. Once the water reaches a boil, the light will turn off and the kettle will automatically shut off.
 9. Using the cool-touch handle, lift the kettle and serve. Make sure lid is closed before pouring hot water.
 10. When finished serving, unplug the power cord and pour out any remaining water.
-



Caution:

The body portions of the kettle will become extremely hot during use and remain hot for sometime after. **Do not touch the body until the kettle has cooled completely.**

Never fill kettle with any liquid other than water. Never open the lid while water is boiling.

If the kettle is heated with no water, the internal safety mechanism will automatically turn the kettle off. The kettle will begin working again after the internal temperature drops to a safe level. The kettle functions properly when water is added.

Do not leave the power cord plugged in the AC outlet. Always unplug the cord after use.

Do not attempt to collapse kettle when water is inside of kettle or during operation.

MINERAL DEPOSITS

Hard water can leave mineral deposits that create scale build-up on the interior of the kettle. If mineral deposits occur, follow these steps:

1. Fill the kettle with 1.5 cups of water.
2. Following the instructions in **To HEAT/BOIL WATER** on page 8, bring the water to a boil.
3. Add one cup of white vinegar to the water in the kettle.
4. Allow the mixture to soak overnight.
5. Empty the mixture and rinse out the kettle.
6. Refill the kettle with water only. Bring it to a boil and empty again. Repeat as needed.
.....

Helpful Hints:

Using distilled water will help to prevent the build-up of mineral deposits.

RECIPES

Honey Mint Tea

1 tbsp	honey
1	fresh mint leaves
1	lemon wedge
1 cup	hot water

Boil 1 cup of water with your electric water kettle. Add 1 tablespoon of honey to a heat-safe mug. Muddle together mint and lemon juice. Pour hot water over ingredient mix.

SERVES 1.
.....

Hot Peanut Butter Cup

1 packet*	hot cocoa mix
2 tsp	peanut butter
1 cup	hot water

* 1 cocoa mix packet is
approximately 1.5 tablespoons.

Boil 1 cup of water with your electric water kettle. Allow to cool slightly. Add cocoa mix packet* of your choice and hot water to a heat-safe mug. Mix in 2 teaspoons of peanut butter. Allow to cool and enjoy!

SERVES 1.
.....

LIMITED WARRANTY

Aroma Housewares Company warrants its products against defects in material and workmanship for one year from provable date of purchase in the United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$15.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for a return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not apply if the warranty period expired; the products has been modified by any unauthorized service center or personnel; the defect was subject to abuse, improper use not conforming to product manual instructions, or environment conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, lightning, earthquake, other natural calamities, war, vandalism, theft, brownouts or sags (damage due to low voltage disturbances).

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States.

.....

SERVICE & SUPPORT

In the event of a warranty claim, or if service is required for this product, please contact Aroma@ customer service toll-free at:

1-800-276-6286

M-F, 8:30am-4:30pm, Pacific Time

Or we can be reached online at:

CustomerService@AromaCo.com

For your records, we recommend stapling your sales receipt to this page along with a written record of the following:

· Date of Purchase:

· Place of Purchase:

.....

Aroma Housewares Company
6469 Flanders Drive, San Diego, CA 92121, U.S.A.

1-800-276-6286 | www.AromaCo.com

M-F, 8:30am – 4:30pm, Pacific Time

Note:

· Proof of purchase is required for all warranty claims.



To Enhance and Enrich Lives.



www.AromaCo.com