

AROMA[®]
PROFESSIONAL



instruction manual

AWK-170D

Digital Glass Kettle

Questions or concerns about your Aroma product?

www.AromaCo.com/Support

1-800-276-6286

DISCOVER
more of our
products!



Multicookers/
Rice Cookers



Pot-Style
Rice Cookers



Water Kettles



Indoor Grills



Woks

AROMA®

To Enhance and Enrich Lives.

Here at Aroma we strive to make a difference—to design and distribute products that enhance and enrich people's lives.

Aroma offers an array of exceptional products to make cooking simple and satisfying. Discover other countertop appliances and cookware from our current product lineup to complement your kitchen.

REGISTER YOUR PRODUCT



SCAN TO REGISTER
[AromaCo.com/registration](https://www.AromaCo.com/registration)

Activate your warranty.
Registration is quick and easy.

Be notified of:

- new product releases
- new test kitchen recipes
- sales and promotions
...and more!



[/AromaHousewares](https://www.instagram.com/AromaHousewares)



IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. **Important: Read all instructions carefully before first use.**
2. Do not touch hot surfaces. Use the handles or knobs.
3. To protect against fire, electrical shock and injury to persons, do not immerse the power cord, plug or kettle in water or any other liquid. See instructions for cleaning.
4. Close supervision is necessary when the appliance is used by or near children.
5. Always unplug the appliance from the outlet when not in use and before cleaning. Allow the kettle to cool completely before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged power cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Aroma® customer service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Aroma® Housewares may result in fire, electrical shock or injury.
8. Do not use outdoors.
9. This appliance is for household use only.
10. Do not allow the power cord to hang over the edge of a table or counter or to touch hot surfaces.
11. Do not place the kettle on or near a hot gas or electric burner or in a heated oven.
12. To disconnect, press (⏻) then remove the power cord from the wall outlet.
13. Always unplug the power cord from the plug gripping area. Never pull on the power cord.
14. Only use the kettle to heat water. No other liquids should be placed inside the kettle.
15. Do not use the kettle for anything other than its intended use.
16. The power base must only be used with the provided kettle.
17. Do not unscrew any screws on the kettle or power base or attempt to disassemble them in any way.
18. Do not attempt to move the kettle while boiling or heating.
19. Do not immerse this appliance or any of its parts in water.
20. Use only with a 120V AC power outlet.
21. Do not open the kettle lid when in operation. Scalding may occur if the lid is removed during the boiling cycle.
22. **CAUTION:** To prevent overflow while boiling, do not allow liquids to exceed the MAX fill line.
23. Use only on a level, dry and heat-resistant surface.
24. Intended for countertop use only.
25. The electric kettle should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances the electric kettle may not operate properly.

Published By:
Aroma Housewares Co. | 6469 Flanders Drive, San Diego, CA 92121, U.S.A.
1-800-276-6286 | www.AromaCo.com

©2021 Aroma Housewares Company | All rights reserved.

SAVE THESE INSTRUCTIONS



IMPORTANT SAFEGUARDS


Parts Identification

Short Cord Instructions

1. A short power-supply cord is provided to reduce the risks resulting from it being grabbed by children, and becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
 - a.) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b.) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled by children or tripped over unintentionally.

DO NOT DRAPE CORD!

KEEP AWAY FROM CHILDREN!

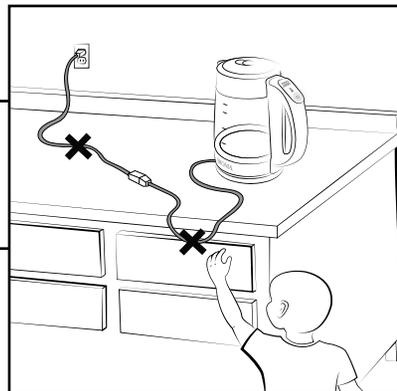


Polarized Plug

This appliance has a polarized plug (one blade is wider than the other); follow the instructions below:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

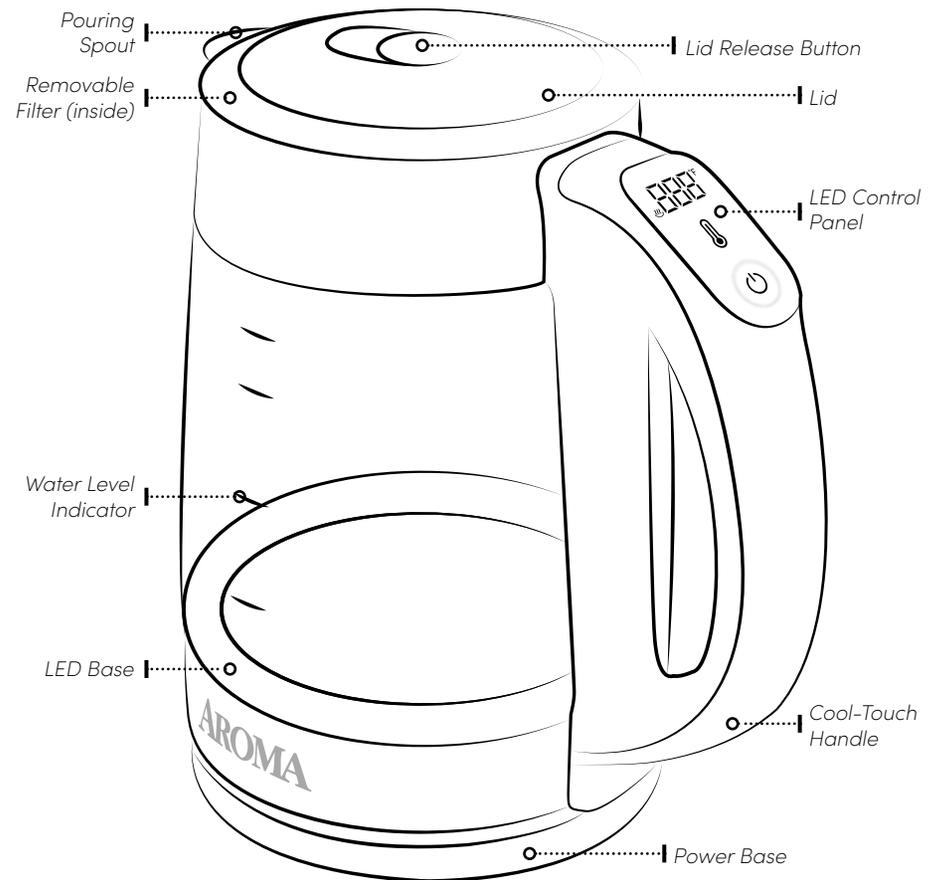

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

Controls/Functions

Power (⏻)
Powers the kettle on/off or initiates **Keep Warm** mode when pressed and held for more than 3 seconds.

Temperature (⏻)
Cycles through the temperature range (104°F-212°F) in 18 degree increments with each press.

Keep Warm (☺)
Indicates **Keep Warm** mode is enabled.

BEFORE FIRST USE

1. **Read all instructions and important safeguards.**
2. Remove all packaging materials and check that all items have been received in good condition.
3. Tear up all plastic bags and dispose of them properly as they can pose a risk to children.
4. Clean the interior of the kettle with a soft sponge and warm, soapy water. If your hand will not fit inside the kettle, swish warm, soapy water around in the interior of the kettle with the kettle lid on. Take care to keep the electrical components on the exterior of the kettle dry.
5. Rinse and drain any remaining soapy water from the kettle.
6. With a damp cloth, gently wipe the exterior of the kettle. Do not wipe electrical components as this may cause damage to the unit.
7. Dry the interior and exterior of the kettle thoroughly before placing the kettle onto the power base.
8. Following the instructions in "Heating Water" on pages 7-8, boil 7 cups of water. Once the water has boiled, pour it out then rinse the inside of the kettle once more with warm water. The kettle is now ready for use.
.....

TO CLEAN

1. Clean the interior of the kettle with a soft sponge and warm, soapy water. If your hand will not fit inside the kettle, swish warm, soapy water around in the interior of the kettle with the kettle lid on.
2. Rinse and drain any remaining soapy water from the kettle.
3. With a damp cloth, gently wipe the exterior of the kettle. Do not wipe electrical components as this may cause damage to the unit.
4. Dry the interior and exterior of the kettle thoroughly before placing it back onto the power base.
.....



Caution:

Never attempt to disassemble the kettle or the power base.

Always take care not to allow electrical components to come into contact with water. Never immerse the kettle, power cord, plug or power base in water.

Do not use abrasive cleaners or scouring pads of any kind on the kettle or power base. This will cause damage to the finish and may create a risk of electrical shock.

Always unplug the kettle and allow it to cool completely before cleaning.

TROUBLESHOOTING

The water is boiling, but the kettle does not turn off.

- The auto shut-off function will not operate properly if the lid is not completely closed. Allow the kettle to cool, then check to see that the lid is properly locked into place.

The kettle will not turn on.

- Make sure that the kettle is seated properly on the power base and that the base is connected to a functioning electrical outlet. Water or debris on the bottom of the kettle or on the power base may interfere with the functioning of the kettle. Be sure that the base of the kettle and the power base are dry and free of debris.

There are mineral deposits on the interior of the kettle.

- A certain amount of scale build-up is normal after use and is caused by minerals contained in hard water. To remove deposits, refer to "Mineral Deposits" on page 8.

If the kettle is heated with no water inside, the internal safety mechanism will automatically turn the kettle off.

- Remove the kettle from the power base and fill with at least 2 cups of water then return to the power base. The kettle will begin working again once the internal temperature has dropped to a safe level.
.....

HEATING WATER

1. Place the power base on a sturdy, level and dry surface.
2. Open the kettle lid using the lid release button and fill with water. Water must be filled between the MIN and MAX levels.
3. Close the lid ensuring it locks into place.
4. Make sure the bottom of the kettle is completely dry then place the kettle onto the power base.
5. Plug the power cord into an available 120V AC wall outlet.
6. Press (⏻) to turn the kettle on.

Note:

If the problem persists, please contact our customer service department at **1-800-276-6286** or by email at **CustomerService@AromaCo.com**.

HEATING WATER (CONT.)

7. Press (⏻) again to bring contents to boiling temperature (212°F). To bring contents to a custom temperature, press (⏻) to cycle through the temperature range in 18 degree increments, up to 212°F. When the desired temperature appears on the LED control panel, press (⏻).
8. To initiate automatic **Keep Warm** mode, press and hold (⏻) for 3 seconds after setting the temperature. The **Keep Warm** icon (🔥) will appear in the digital display and the kettle will beep to signify it has been set.
9. The LED base will illuminate turquoise and the kettle will begin heating. As the kettle reaches the input temperature, the color of the LED base will change based on the current internal temperature.
10. Once the water reaches the input temperature, the kettle will automatically shut off. If **Keep Warm** mode was initiated, the kettle will automatically maintain the input temperature for 2 hours.
11. Gripping by the cool-touch handle, lift the kettle off the power base to serve. Do not touch the glass body as the surface will be hot.
12. When finished serving, pour out any remaining water and unplug the power cord.

Drink/Food	Suggested Temperature
French Press Coffee	195°F
Oolong Tea	175°F
Green Tea	160°F-175°F
Black Tea or Herbal Tea	212°F
White Tea	160°F
Noodles or Oatmeal	212°F
Hot Chocolate	212°F
LED Base Color	Temperature
Turquoise	Room Temperature-121°F
Green	122°F-141°F
Blue	142°F-155°F
Purple	156°F-173°F
Orange	174°F-193°F
Red	194°F-212°F

8.



Caution:

The glass portion of the kettle will become extremely hot during use and remain hot for some time after. **Do not touch the glass body until the kettle has cooled completely.**

Never fill the kettle with any liquid other than water.

Never open the lid while water is boiling.

Note:

- If the digital display enters standby mode after remaining idle, simply press (⏻) to exit standby mode.
- Once the kettle is lifted away from the power base, **Keep Warm** mode will be canceled.
- To prevent boiling dry, automatic **Keep Warm** mode is not available when the kettle is set to reach boiling point. **Keep Warm** is only available when the kettle is set below 212°F.

MINERAL DEPOSITS

Regular use of the kettle can leave behind mineral deposits or cause white residue and scale build-up on the interior of the kettle. This residue is normal and will not negatively affect you or the unit but can impact the quality of prepared meals/drinks over time if not cleaned properly. Follow these steps to remove deposits and residue:

1. Fill the kettle with 6 cups of water and 3 tablespoons of baking soda **OR** 1 cup of white vinegar **OR** ½ cup of lemon juice.
2. Bring contents to a boil by following the instructions in "Heating Water" on pages 7-8.
3. Allow the mixture to soak in the kettle overnight.
4. Empty contents and rinse out the kettle thoroughly with warm, soapy water.
5. Fill the kettle with 7 cups of water and bring to a boil. Once boiled, empty the kettle and dry thoroughly.
6. Repeat as needed.

Note:

- Using distilled water will help to prevent the buildup of mineral deposits.
- It is recommended to deep clean the kettle at least once a month.

9.

RECIPES

Honey Mint Tea

4 tbsp.	honey
1-2	fresh mint leaves
1	lemon wedge
4 cups	water

Bring 4 cups of water to a boil. While the water boils, add 1 tablespoon of honey each to 4 heat-safe mugs. Muddle together the mint and lemon juice then evenly distribute between the mugs. Pour the boiled water over top the ingredient mix in each mug then serve.

SERVES 4.
.....

Hot Peanut Butter Cup

4 packets*	hot cocoa mix
8 tsp.	peanut butter
3 cups	water

*1 hot cocoa mix packet is approximately 1½ tablespoons

Bring 3 cups of water to a boil then allow the water to cool slightly. Add a hot cocoa mix packet* of your choice and ¾ cup of hot water each to 4 heat-safe mugs. Thoroughly mix in 2 teaspoons of peanut butter to each mug then serve.

SERVES 4.
.....

Egg Drop Ramen

2 packs	instant ramen noodles
6 cups	water
2	eggs
2 tsp.	scallions, chopped
1 tsp.	sesame oil
1 tbsp.	soy sauce

Bring 6 cups of water to a boil. Place the dried noodles in 2 heat-safe bowls. If desired, pour the flavor packets over the noodles. Carefully pour 2 cups of hot water over each of the bowls. Let the noodles sit for about 3 minutes to cook, then stir. Re-boil the remaining 2 cups of water. Pour the water over the noodles and add an egg to each. Stir thoroughly until the egg is distributed. Add in the sesame oil, soy sauce, and scallions.

SERVES 4.
.....

LIMITED WARRANTY

Aroma Housewares Company warrants its products against defects in material and workmanship for two years from provable date of purchase in the United States. Within this warranty period, Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$20.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for a return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not apply if the warranty period expired; the products has been modified by any unauthorized service center or personnel; the defect was subject to abuse, improper use not conforming to product manual instructions, or environment conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, lightning, earthquake, other natural calamities, war, vandalism, theft, brownouts or sags (damage due to low voltage disturbances).

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States.
.....

SERVICE & SUPPORT

In the event of a warranty claim, or if service is required for this product, please contact Aroma® customer service toll-free at:

1-800-276-6286

M-F, 8:30am-4:30pm, Pacific Time

Or we can be reached online at:

CustomerService@AromaCo.com



Activate your warranty.
Registration is quick and easy.

SCAN TO REGISTER
or visit **AromaCo.com/registration**
.....

Note:

Proof of purchase is required for all warranty claims.

For additional recipes, visit us at
www.AromaCo.com

Aroma Housewares Company
6469 Flanders Drive, San Diego, CA 92121, U.S.A.
1-800-276-6286 | www.AromaCo.com
M-F, 8:30am – 4:30pm, Pacific Time



To Enhance and Enrich Lives.



www.AromaCo.com