

AROMA®



instruction manual

AAF-200

Air Fryer

Questions or concerns about your Aroma product?

www.AromaCo.com/Support

1-800-276-6286

⚠ IMPORTANT SAFEGUARDS


Basic safety precautions should always be followed when using electrical appliances, including the following:

1. **Important: Read all instructions carefully before first use.**
2. Do not touch hot surfaces. Use the handles or knobs.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or the appliance in water or any other liquid. See instructions for cleaning.
4. Close supervision is necessary when the appliance is used by or near children.
5. Unplug from the wall outlet when not in use and before cleaning. Allow unit to cool completely (approximately 30 minutes) before putting on or taking off parts or before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Aroma® customer service for examination, repair or adjustment.
7. The use of accessory attachments not recommended by Aroma® Housewares may result in fire, electrical shock or injury.
8. Do not use outdoors.
9. Do not let cord touch hot surfaces or hang over the edge of a counter or table.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. Do not use the appliance for other than its intended use.
12. When in use, keep appliance a minimum of 6 inches away from walls. Place on a stable, heat-resistant surface and in a well-ventilated area. Place the appliance on a dry and horizontal surface.
13. Always unplug from the plug gripping area. Never pull on the cord.
14. To reduce the risk of electric shock, cook only in the removable container provided.
15. The air fryer should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances, the appliance may not operate properly.
16. Use only with a 120V AC power outlet.
17. To disconnect, first power off the unit, then remove the plug from the wall outlet.
18. Do not let the appliance operate unattended.
19. During air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also be careful of hot steam and air when you remove the pan from the appliance. Any accessible surfaces may become hot during use.
20. Immediately unplug the appliance if you see smoke coming out of the appliance. Wait for the smoke emission to stop before you remove the pan from the appliance.
21. Never immerse the housing, which contains electrical components and the heating elements, in water nor rinse it under the tap.
22. To prevent electric shock do not let any water or other liquid enter the appliance.
23. Always put the ingredients to be fried in the basket, to prevent it from coming into contact with the heating elements.
24. Do not cover the air inlet and the air outlet openings while the appliance is operating.
25. Do not fill the pan with oil as this may cause a fire hazard.
26. Do not fill the pan with food more than 2/3 of capacity.
27. Never touch the inside of the appliance while it is operating.
28. A fire may occur if the air fryer is covered or touching flammable material, such as curtains, draperies, walls and the like, while in operation.
29. Do not place any flammable materials in or on the air fryer, such as paper, cardboard, plastic, etc.
30. Do not attempt to move the appliance during cooking.
31. Do not plug in or operate with wet hands.
32. Intended for countertop use only.

SAVE THESE INSTRUCTIONS

Short Cord Instructions


1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if care is exercised in their use.
3. If a longer extension cord is used:
 - a. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - b. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled by children or tripped over unintentionally.
 - c. The extension cord should be a grounding-type 3-wire cord.

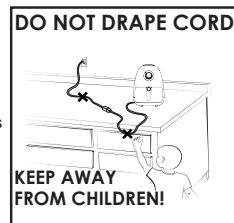

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

Grounding Instructions

This appliance must be grounded while in use to protect the operator from electrical shock. The appliance is equipped with a 3-conductor cord and a 3-prong grounding-type plug to fit the proper grounding-type receptacle. The appliance has a plug that looks like figure (A).

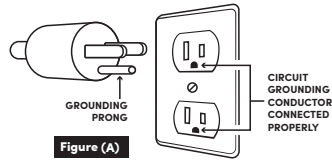

⚠ BEFORE FIRST USE

1. Read all instructions and important safeguards.
2. Remove all packaging materials and check that all items have been received in good condition.
3. Tear up all plastic bags as they can pose a risk to children.
4. Remove the baking tray from the frying pan for easier cleaning.
5. Thoroughly clean the frying pan and baking tray with soapy water. Rinse and dry thoroughly. Wipe the surface of the body and inside with a wet cloth.
.....
6. Let all parts dry completely. Make sure the rubber scratch guards of the baking tray are fully covering the metal feet to avoid scratching the non-stick inner surface of the frying pan.
7. After cleaning, the unit must be broken in by running for 30 minutes without any food inside. Any smells produced during this time frame are normal. Please ensure sufficient ventilation of the room and at least an inch of clearance on all sides of the air fryer is available. After the breaking in period, rinse and dry all removable parts. This action is only necessary once before using for the first time.

NOTE:

- You can also wash the removable parts in a dishwasher.
- Always take care not to allow electrical components to come into contact with water.

USING AIR FRYER

1. Pull the pan out of the main body of the air fryer. Make sure that the baking tray is inserted and pushed to the bottom.
2. Add your ingredients to the frying pan. Distribute food evenly throughout the pan to ensure even cooking.
3. Slide the pan back into the air fryer.
4. Plug the power cord into an available 120V AC wall outlet.
5. Turn the time control dial to the required cooking time for your recipe. The indicator light will illuminate.
6. The timer bell will ding when cooking is complete and the indicator light will turn off.
7. Pull the pan out of the appliance. Keep your face and hands away from the hot steam when opening. Place the pan on a heat-resistant surface.
.....

⚠ CAUTION:

- Do not touch the pan during and some time after use, as it gets very hot. Only hold the pan by the handle.
- Never use the pan without the baking tray in it. If the appliance is heating ingredients in the absence of the baking tray, use a special oven glove to open the drawer. The side wall and edge of the drawer can become very hot.
- Do not fill the pan with oil or any other liquid. This is not intended to be used as a deep fryer.

NOTE:

- Do not turn the frying pan upside down as any excess oil that has collected on the bottom of the pan below the baking tray will leak onto the ingredients.
- When a batch of ingredients is ready, the air fryer is instantly ready for preparing another batch.

HELPFUL HINTS:

- Some ingredients require shaking halfway through the preparation time. To shake the ingredients, pull the pan out of the appliance by the handle and shake it. Then slide the pan back into the air fryer. If you set the timer to half the preparation time, you hear the timer bell ding when you have to shake the ingredients. However, this means that you have to set the timer again to the remaining preparation time after shaking.
- Smaller ingredients usually require a slightly shorter preparation time than larger ingredients.
- A larger amount of ingredients only requires a slightly longer preparation time, a smaller amount of ingredients only requires a slightly shorter preparation time
- Brush a small amount of oil to fresh potatoes for a crispy result. Fry your ingredients in the air fryer within a few minutes of adding the oil.
- You can also use the air fryer to reheat ingredients. To reheat ingredients, set the time to 10 minutes.

FOOD	TIME*
Homemade fries	20 - 27 minutes
Hamburger patties	8 - 15 minutes
Chicken breast	12 - 17 minutes
Chicken wings	20 - 25 minutes
Frozen Chicken nuggets	9 - 13 minutes

*Keep in mind that these times are estimations. As ingredients differ in origin, size, shape as well as brand, we cannot guarantee the best setting for your ingredients.
 For your cooking reference, the air fryer reaches a temperature of 360°F while in operation.

TO CLEAN

1. It is recommended to clean the air fryer after every use.
2. Do not use abrasive cleaners in the frying pan as they may cause damage to the nonstick coating.
3. Before cleaning, unplug the unit and let it cool completely. You can remove the pan to let the air fryer cool down more quickly.
4. Wipe the outside of the unit with a damp cloth only. Do not immerse in liquid.
5. Remove the baking tray from the frying pan for better cleaning.
6. Clean the frying pan with hot water and mild dish detergent.
7. Use a soft brush to remove food sticking to the baking tray. You can remove the rubber scratch guards for better cleaning.
8. Wipe the surface of the body with a wet cloth.
9. Clean the inside of the appliance with hot water and a non-abrasive sponge.
10. Clean the heating element with a cleaning brush to remove any food residue.
11. Make sure all parts are clean and dry for re-assembling.

NOTE:

- Clean the appliance after every use.
- Let the appliance cool down for approximately 30 minutes prior to cleaning it.
- Do not use harsh abrasive cleaners or scouring pads.
- Do not immerse the body, cord or plug in water at any time.
- You can also wash the removable parts in a dishwasher.
- Any other servicing should be performed by Aroma® Housewares. Contact Aroma® customer service at 1-800-276-6286, Monday to Friday 8:30AM-4:30PM PST.

LIMITED WARRANTY

Aroma Housewares Company warrants this product against defects in material and workmanship for 1 year from provable date of purchase in the United States.

Within this warranty period, Aroma Housewares Company will repair or replace, at its discretion, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase and U.S. \$15.00 for shipping and handling charges payable to Aroma Housewares Company. Before returning an item, please call the toll free number below for a return authorization number. Allow 2-4 weeks for return shipping.

This warranty does not apply if the warranty period expired; the product has been modified by any unauthorized service center or personnel; the defect was subject to abuse, improper use not conforming to product manual instructions, or environmental conditions more severe than those specified in the manual and specification, neglect of the owner or improper installation; the defect was subject to Force Majeure such as flood, lightning, earthquake, other natural calamities, war, vandalism, theft, brownouts or sags (damage due to low voltage disturbances).

This warranty gives you specific legal rights, which may vary from state to state, and does not cover areas outside the United States. Call the number below for service or support:

Aroma Housewares Company
 6469 Flanders Drive, San Diego, CA 92121, U.S.A.
1-800-276-6286 | www.AromaCo.com
 M-F, 8:30am – 4:30pm, Pacific Time