

For your 6-rice cup Rice Cooker



Thank you for choosing an Aroma rice cooker, and welcome to our growing community of home chefs.

Whether you're a seasoned cook or a beginner in the kitchen, this guide will help you get the most out of your rice cooker.

Don't forget – there's even more to discover on social media. Follow us @aromahousewares for more recipe ideas, cooking tips, and inspiration!

Let's get started!

### CONTACTINFO



#### **Contact Us**

We're here to help! Get in touch with our customer care team for product recommendations, replacement parts, and answers to all your questions.

Email Customerservice@aromaco.com Call 1-800-276-6286 (toll-free)

Hours Mon-Fri, 8:00am-4:30pm PST

## TABLE OF CONTENTS

How to Cook White Rice	4	Creamy Cheesecake	22
White Rice Chart	5	Teriyaki Shrimp & Rice	23
How to Cook		One-Pot Spanish Quinoa	24
Brown Rice	6	BBQ Meatballs	25
Quinoa	7	Goulash	26
Oatmeal	8	Chocolate Pumpkin Cake	27
How to Cook Soup	9	Sausage & Egg Casserole	28
Recipe	10	Sausage & Lentil Stew	29
Apple Cinnamon Oatmeal	11	Navy Bean Soup	30
Creamy Corn Egg Drop Soup	12		
One-Pot Tomato Rice	13		
Chicken Noodle Soup	14		
Beef Chili	15		
Cilantro Lime Rice	16		
Macaroni & Cheese	17		
One-Pot Pasta	18		
Frottata	19		
California-Style Egg Muffins	20		
Curry Couscous	21		



# HOW TO COOK WHITE RICE

- Measure rice using the provided rice measuring cup. Over fill the cup slightly, then level it off at the brim of the cup for an accurate measurement.
- 2. Rinse measured rice in a bowl of water before adding to the inner pot. Rinse rice for 10 seconds and drain the water. Repeat this process at least 2 times, or until the water runs clear.
- 3. Add rinsed rice to the inner pot, filling up to the line that matches the number of cups of rice.
- 4. Place the pot into the rice cooker and put the lid on top.
- 5. Plug the power cord into a nearby 120-volt AC wall outlet.
- 6. Press the *COOK* switch down to turn on the indicator light and start cooking.
- 7. The **COOK** switch will automatically flip up to the **WARM** mode when white rice is ready.
- 8. Stir and fluff with the spatula before serving.
- 9. Unplug the power cord to turn off the rice cooker before cleaning.





Fill to the top of your rice measuring cup




 Rinse and drain rice to remove starch



 Look for water lines inside the pot



• Always use the included rice measuring cup (Rice Cup) for above table 1 Rice Measuring Cup =  $\frac{3}{4}$  U.S. Cup (180ml)

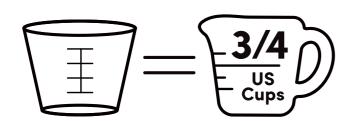


AROMA

### WHITE RICE CHART

WHITE RICE uncooked	WATERLINE inside the Pot	COOK TIME on average	YIELDS cooked rice
1 Rice Cup	Line 1 (≈ 270 ml)	16-21 Min.	2 Rice Cups
2 Rice Cup	Line 2 (≈ 480 ml)	21-26 Min.	4 Rice Cups
3 Rice Cup	Line 3 (≈ 675 ml)	26-31 Min.	6 Rice Cups

### Note

- Not all rice types or brands are the same, so results and timings may vary.
- Do not leave food in the cooker on WARM mode for more than 12 hours.
- Before cooking, we recommend rinsing rice in a pot or bowl, not a strainer.
- To add more flavor to rice, try substituting a favorite meat or vegetable broth or stock. The ratio of broth/ stock to rice will be the same as water to rice.
- Before placing the inner pot into the cooker, check that the inner pot is dry and free of debris. Adding the inner pot when wet may damage the cooker.
- After cooking, the inner pot will be very hot. Be sure to use heat-resistant gloves or protective oven mitts to remove the inner pot from the cooker.
- Always use the included rice measuring cup (Rice Cup) for above table 1 Rice Measuring Cup = 3/4 U.S. Cup (180ml)

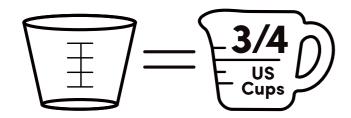

**AROMA** 5.


# HOWTO COOK BROWN RICE

- 1. Use the provided measuring cup to pour rice into the inner pot.
- 2. Rinse rice in the pot for 10 seconds and drain the water. Repeat at least 3 times, or until the water runs clear.
- 3. Add water to the pot, filling up to the line that matches the number of cups of rice.
- 4. Place the pot into the rice cooker and put the lid on top.
- 5. Plug the power cord into a nearby 120-volt AC wall outlet.
- 6. Press the **COOK** switch down to turn on the indicator light and start cooking.
- The COOK switch will automatically flip up to the WARM mode when your rice is ready.
- 8. Stir and fluff with the spatula before serving.
- 9. Unplug the power cord to turn off the rice cooker before cleaning.

BROWN RICE uncooked	WATERLINE inside the Pot	COOK TIME on average	YIELDS cooked rice
1 Rice Cup (max capacity)	Line 1 (≈ 270 ml)	28-33 Min.	2 Rice Cups

### Note

• Always use the included rice measuring cup (Rice Cup) for above table 1 Rice Measuring Cup = 3/4 U.S. Cup (180ml)

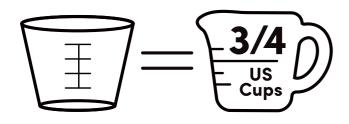

AROMA 6.


# HOWTO COOK Quinoa

- 1. Use the provided measuring cup to pour rice into the inner pot.
- 2. Rinse rice in the pot for 10 seconds and drain the water. Repeat at least 3 times, or until the water runs clear.
- 3. Add water to the pot, filling up to the line that matches the number of cups of rice.
- 4. Place the pot into the rice cooker and put the lid on top.
- 5. Plug the power cord into a nearby 120-volt AC wall outlet.
- 6. Press the *COOK* switch down to turn on the indicator light and start cooking.
- 7. The **COOK** switch will automatically flip up to the **WARM** mode when your rice is ready.
- 8. Stir and fluff with the spatula before serving.
- 9. Unplug the power cord to turn off the rice cooker before cleaning.

QUINOA	WATER		Max grain
uncooked	or broth		uncooked
1 Rice Cup	1½ Rice Cups (≈ 270 ml)	2½ Rice Cups	2 Rice Cups

### Note

• Always use the included rice measuring cup (Rice Cup) for above table 1 Rice Measuring Cup =  $\frac{3}{4}$  U.S. Cup (180ml)

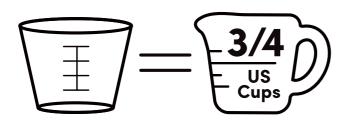

AROMA 7.

# HOWTO COOK OATMEAL


- 1. Use the provided measuring cup to pour oatmeal into the inner pot.
- 2. Add water to the pot, according to the chart below.
- Place the pot into the rice cooker, stir, and leave the top open without a lid.
- 4. Plug the power cord into a nearby 120-volt AC wall outlet.
- 5. Press the *COOK* switch down to turn on the indicator light and start cooking.
- 6. The **COOK** switch will automatically flip up to the **WARM** mode when your oatmeal is ready.
- Stir and fluff with the spatula before serving.
- 8. Unplug the power cord to turn off the rice cooker before cleaning.

	WATER or broth		Max grain uncooked
1 Rice Cup	2 Rice Cups (≈ 360 ml)	2 Rice Cups	1 Rice Cups

	WATER or broth		Max grain uncooked
1 Rice Cup	3 Rice Cups (≈ 540 ml)	2 Rice Cups	1 Rice Cups



• Always use the included rice measuring cup (Rice Cup) for above table 1 Rice Measuring Cup =  $\frac{3}{4}$  U.S. Cup (180ml)

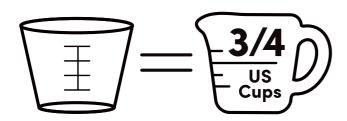

AROMA 8.

# HOWTO COOK SOUP

- 1. Add ingredients to the inner pot, up to the maximum water line (3).
- 2. Carefully place the pot inside the rice cooker. To prevent boiling over, leave the top open without a lid.
- 3. Plug the power cord into a nearby 120-volt AC wall outlet.
- 4. Press the cooking switch down to turn on the indicator light and start heating.
- 5. Stir occasionally with a long-handled wooden spoon or heat-safe utensil.
- 6. When your soup is ready to serve, press the **COOK** switch up for the **WARM** mode.
- 7. Unplug the power cord to turn off the rice cooker before cleaning.

### Note

- Avoid cooking for more than 60 minutes, in order to protect your appliance's heating element and avoid overcooking.
- Do not use the provided serving spatula to stir hot soup, chili, or stew. It is not
  intended to be used in contact with high temperatures. Use a long-handled
  wooden or heat-safe spoon to stir food while sautéing.

AROMA

9.



Make healthy, delicious dishes with ease. We're here to help.



# Apple Cinnamon Oatmeal

### **SERVES 2-3.**

2 cup Apple juice

1 cup Water

1 cup Steel-cut oats

1 cup Dried mixed fruit

1 tbsp Brown sugar

1 tbsp Butter

½ tsp Cinnamon

1 dash Nutmeg

½ tsp Salt

1 tbsp Lemon juice

- Add all ingredients to the pot and mix well.
- Place the inner pot in the rice cooker (without a lid) and press the **COOK** switch down.
- After 10 minutes, carefully stir with a long-handled wooden spoon, avoiding hot steam.
- Continue cooking until the rice cooker automatically switches to WARM.
- Wait 10 minutes, then stir and serve with a sprinkle of sugar on top, if desired.

AROMA 11.



# Creamy Corn Egg Drop Soup

#### **SERVES 3.**

1 can Sweet creamed corn

2 cup Chicken stock

2 Egg

2 Green onion, chopped

2 slice Thick-cut ham

- Pour chicken stock, green onion whites, and corn into the inner pot.
- Place the inner pot in the rice cooker (without a lid) and press the COOK switch down.
- Crack eggs into a small bowl and beat with a whisk.
- After 15 minutes, add eggs to the soup while constantly stirring.
- Serve in bowls with sliced ham on the side.

AROMA 12.



### **One-Pot Tomato Rice**

### **SERVES 2.**

2 cup Rice

½ cup Sausage, diced

½ cup Corn

½ cup Onion, diced

½ cup Mushroom, diced

½ cup Carrot, diced

½ cup Pea

1 medium Tomato2 cup Water

- Pour all ingredients into the rice cooker (except the tomato) and stir.
- Using a knife, cut an 'X' across the bottom of the tomato and add it to the top of the pot.
- Place the inner pot in the rice cooker, close the lid, and press the *COOK* switch down.
- Immediately after the rice cooker switches to WARM mode, stir and serve.

AROMA° 13.



## Chicken Noodle Soup

#### **SERVES 2.**

1 tbsp Olive oil

½ cup Onion, diced

½ cup Carrot, sliced

2 tsp Garlic, minced

1 Chicken breast, cubed

3 cup Chicken stock

½ cup Rotini pasta

To taste Salt and pepper

- Add olive oil, onion, carrot, garlic to inner pot.
- Press the *COOK* switch down, sauté for 5 minutes.
- Add the pasta, chicken, chicken broth, stir to combine. Do not place the glass lid on top.
- Cook for approximately 15 minutes. Season with salt and pepper and push the cook switch up to switch the cooker to **WARM** mode. Serve hot.

AROMA 14.



### **Beef Chili**

### **SERVES 2.**

1lb	Ground beef	1 cup	Beef broth
2 tbsp	Olive oil	To taste	Salt and pepper
1 cup	Black bean		
1 cup	Kidney bean		
2 tbsp	Chili powder		
2 tbsp	Tomato paste		
1 cup	Diced tomato		
½ cup	Chili seasoning		

- Add olive oil, ground beef to inner pot.
- Press the *COOK* switch down, sauté for 10 minutes.
- Add all remind ingredients to inner pot and stir. Do not place the glass lid on top.
- Cook until the cycle done and cook switch to **WARM** mode. Serve hot.

AROMA 15.



### Cilantro Lime Rice

#### **SERVES 2.**

1 tsp Olive oil

½ cup Onion, chopped

1 tbsp Garlic, minced

1 cup Long grain rice

1½ cup Water

2 tbsp Fresh squeezed lime juice

¼ cup Cilantro, chopped

To taste Salt

- Add olive oil, and onion to the inner pot.
- Press the *COOK* switch down, sauté for 5 minutes.
- Add garlic, rice, water, and salt to the inner pot and stir to combine.
- Place the glass lid on top and cook until the cycle is done and cook switch to **WARM** mode. Fluff rice and serve hot.

AROMA 16.



### Macaroni & Cheese

#### **SERVES 2.**

2 cup Macaroni pasta

1½ cup Chicken stock

½ tsp Salt ½ cup Milk

1 cup Cheddar cheese, shredded

1 tbsp Butter

½ cup Skim mozzarella cheese

To taste Salt and pepper

- Add the pasta, chicken stock, milk, and salt to the inner pot and place the glass lid on top.
- Press the COOK switch down and cook until all liquid is absorbed.
- Carefully remove the lid and add the cheese, and butter, and stir well.
- Cook until the cycle is done and cook switch to **WARM** mode, and serve.

AROMA 17.



### **One-Pot Pasta**

#### **SERVES 2.**

2 cup Pasta (elbow macaroni, bow tie or corkscrew pasta)

2 cup Water or chicken broth

1 cup Pasta sauce of your choice

1 cup Shredded cheese of your choice

1 tsp Olive oil

-- Basil leaves, for garnish

- Combine all ingredients except the cheese in the inner pot.
- Place the lid on top and press the **COOK** switch down to begin heating.
- Carefully open the lid to stir occasionally with a long-handled heat-safe spoon.
- When the cooker automatically switches to **WARM**, open the lid and stir in the cheese. Allow the cheese to melt by replacing the lid and cooking for an additional 5 minutes. Serve with more cheese and basil leaves if desired.

AROMA 18.



### Frittata

### **SERVES 2.**

4 Egg

2 slice Deli meat of your choice, chopped

2 Small tomoto, chopped

1 cup Spinach


1 cup Cheese, shredded1 pinch Salt and pepper

• Combine all ingredients in the inner pot and mix well.

• Place the lid on top and press the **COOK** switch down to begin heating.

• When the cooker automatically switches to *WARM*, allow the frittata to rest for an additional 5 minutes or until the eggs are fully set then serve.

AROMA 19.

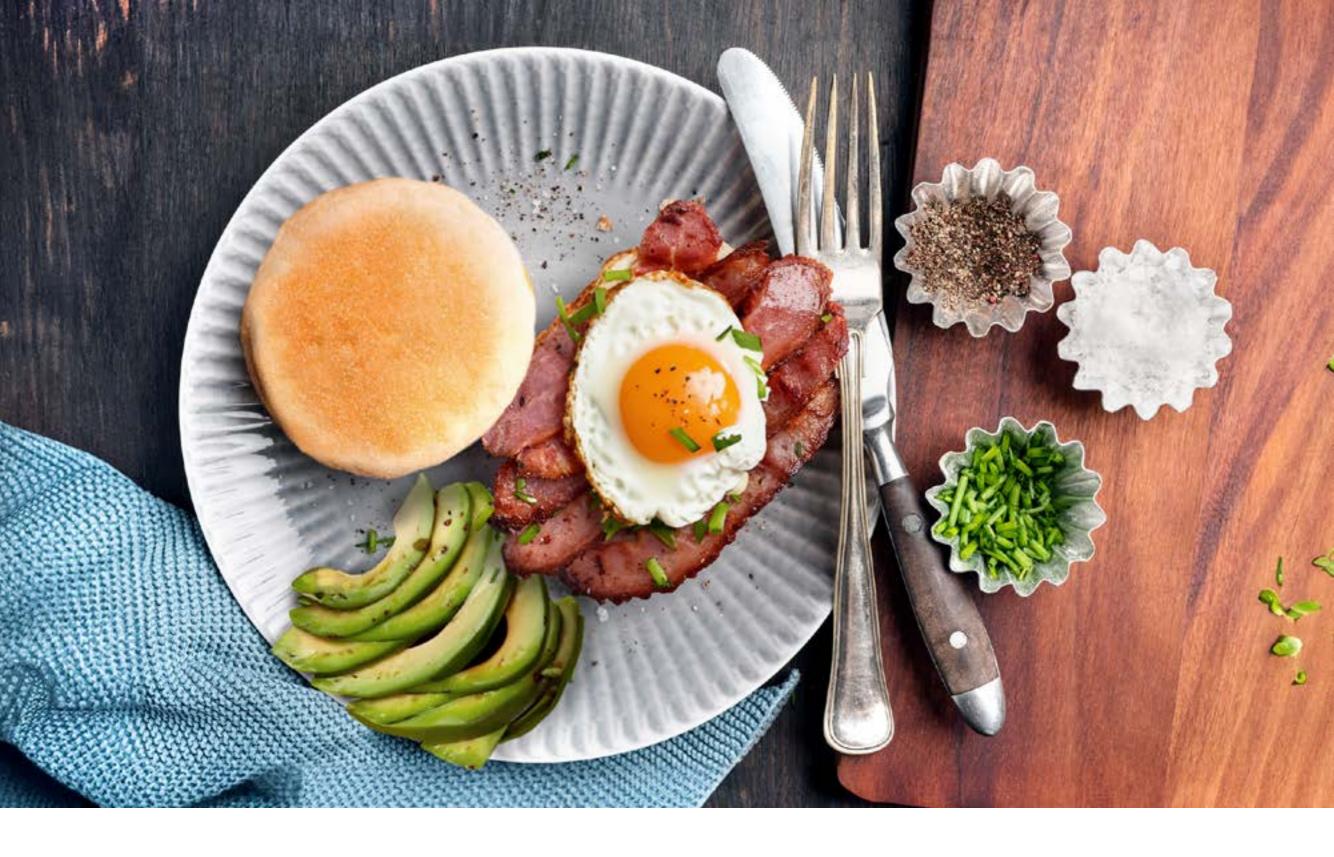

# California-Style Egg Muffins

#### **SERVES 2.**

2 tbsp Butter

2 Whole wheat english muffin, halved

2 slice Canandian bacon

2 Egg

-- Avocado slices, for garnish

- Press the COOK switch down to begin preheating the inner pot. Add the butter and allow it to fully melt.
- Cut a quarter-sized hole in the middle of the Canadian bacon and English muffin.
- Once the butter has melted, first place the English muffin into the inner pot then top with the Canadian bacon slice. Crack the egg into the quarter-sized hole.
- Place the lid on top and allow the cooker to heat until it automatically switches to WARM. If additional cooking is needed, let the sandwich sit in the inner pot on Warm for 5 minutes or until fully cooked.
- Slide onto a plate and top with avocado slices, salt, pepper and paprika if desired.

AROMA 20.



# Curry Couscous

### **SERVES 2.**

1 tsp Olive oil

½ cup Onion, chopped

½ cup Red bell pepper, diced

4 Garlic cloves, minced

1 cup Couscous

2 cup Chicken broth

½ tsp Curry powder

½ tsp Cumin

- Press the COOK switch down to begin preheating the inner pot. Add oil and allow it to heat for 3 minutes.
- Add in garlic, red pepper and onions and cook for 5 minutes or until the onions are translucent.
- Stir in the cumin, chicken broth, curry powder and couscous.
- Place the lid on top and allow the couscous to cook until the cooker automatically switches to WARM then serve.

AROMA<sup>°</sup> 21.



# Creamy Cheesecake

#### **SERVES 2.**

16 oz. Cream cheese, softened

2 cup Sugar

2 Egg

1 tsp Vanilla extract

-- Cooking spray

- Beat the cream cheese, sugar, egg and vanilla with a mixer until the consistency is smooth.
- Lightly coat the inner pot with cooking spray then pour the cheesecake mixture in.
- Place the lid on top and press the COOK switch down to begin heating.
- When the cooker automatically switches to **WARM**, allow the cheesecake to rest for an additional 30 minutes.
- Refrigerate for 2-3 hours then serve cold with mixed berries and whipped cream if desired.

AROMA 22.



# Teriyaki Shrimp & Rice

#### SERVES 2-3.

10 Raw medium shrimp

½ cup Sweet onion, chopped

½ cup1 rozen peas1 cupJasmine rice

2 Garlic clove, minced

1 tsp Fresh ginger, grated

1½ cup Water

 $\frac{1}{2}$  cup Soy sauce

2 tbsp Brown sugar

- Add the onion, peas, rice, garlic, ginger and water to the inner pot and mix thoroughly.
- Once all ingredients have been combined, place the shrimp on top.
- Place the lid on and press the COOK switch down to begin heating.
- After the cooker automatically switches to **WARM**, stir in the soy sauce and brown sugar then serve.

AROMA° 23.



# One-Pot Spanish Quinoa

#### **SERVES 2.**

2	Italian sausage link, sliced	1 pinch	Cumin powder
2 tsp	Olive oil	1 pinch	Salt and pepper
2	Garlic clove, minced	1	Avocado, diced
1 cup	Quinoa	2 tsp	Lemon juice
1½ cup	Chicken broth		Cilantro, for garnish
½ cup	Corn kernels		
½ cup	Tomato, diced		
1 tsp	Chili powder		

- Add the sausage, olive oil, garlic, quinoa, chicken broth, corn, diced tomatoes, chili powder, cumin, salt and pepper to the inner pot and mix thoroughly.
- Place the lid on top and press the COOK switch down to begin heating.
- When the cooker automatically switches to **WARM**, fluff the quinoa slightly then serve with lemon juice, avocado, and cilantro.

AROMA 24.



### **BBQ** Meatballs

#### SERVES 2-3.

1 tsp Olive oil

12 oz Frozen meatballs

½ cup Yellow onion, chopped

1 cup BBQ sauce

4 cup Cabbage, shredded

½ cup Cheddar cheese, shredded

- Add the olive oil, meatballs, onion, and BBQ sauce to the inner pot and mix thoroughly.
- Place the lid on top and press the COOK switch down to begin heating.
- Allow the meatballs to cook for 10 minutes then using caution, remove the lid and mix in the shredded cabbage.
- After the cooker automatically switches to WARM, stir in the cheddar cheese and cook for an additional 2 minutes or until all the cheese has melted then serve.

AROMA 25.



### Goulash

#### **SERVES 2-3.**

1 tsp Olive oil 2 cup Elbow macaroni 1/2 cup Yellow onion, chopped 1/2 cup Water 2 Garlic clove, minced To taste Salt 1 cup Bell pepper, chopped

1/2 lb. Ground beef
1 cup Tomato, diced
1/4 cup Tomato paste
2 tsp Italian seasoning

- Add all ingredients to the inner pot and mix thoroughly.
- Place the lid on top and press the COOK switch down to begin heating.
- After the cooker automatically switches to *WARM*, add salt to taste then serve.

AROMA 26.



# Chocolate Pumpkin Cake

#### **SERVES 4.**

1 cup Pancake mix

1 cup Water

½ cup Pumpkin puree ½ cup Chocolate chips

-- Cooking spray

- In a large bowl, whisk together the pancake batter and water. Once incorporated, stir in the pumpkin purée and chocolate chips.
- Lightly coat the inner pot with cooking spray then pour the batter in.
- Place the lid on top and press the COOK switch down to begin heating.
- Allow the cake to cook for about 20 minutes or until you can insert a toothpick into the middle and remove it with no batter sticking to it.
- Serve **WARM** with a drizzling of melted chocolate, powdered sugar, maple syrup, berries, or whipped cream.

AROMA° 27.



# Sausage & Egg Casserole

### **SERVES 2.**

½ lb Ground pork sausage

4 Large egg

1 cup Milk½ tsp Salt

½ tsp Ground mustard

2 slice White bread, cubed

½ cup Cheddar cheese, shredded

- In a large bowl, beat the eggs then mix in the milk, salt and mustard.
- Once combined, stir in the bread cubes, cheese and ground sausage.
- Pour the egg mixture into the inner pot.
- Place the lid on top and press the COOK switch down to begin heating.
- After the cooker automatically switches to **WARM**, allow the casserole to rest for an additional 25 minutes or until the eggs have set then serve.

AROMA° 28.



### Sausage & Lentil Stew

#### **SERVES 2.**

2	Italian sausage link, sliced	½ tsp	Cayenne
½ cup	Yellow onion, chopped	½ tsp	Smoked paprika
½ cup	Zucchini	½ tsp	Ground cumin
2 cup	Carrot, cubed	½ tsp	Dried oregano
2	Celery stalk, sliced	4 oz	Frozen spinach
2	Carlie clave mineral		

2 Garlic clove, minced

1 cup Lentil

4 cup Chicken broth

- Add the sausage and vegetables to the inner pot and mix thoroughly.
- Press the COOK switch down to begin heating.
- Sauté the sausage and vegetables until the sausage is no longer pink.
- Add the lentils, cayenne, cumin, smoked paprika, oregano, and chicken broth then place the lid on top.
- After the cooker automatically switches to **WARM**, stir in the frozen spinach then press the cook switch down once more.
- Allow the stew to cook until the cooker automatically switches to Warm again, then serve.

AROMA 29.



## Navy Bean Soup

### **SERVES 4.**

Italian sausage link, cubed ½ tsp Dried thyme

Yellow onion, chopped ¼ tsp Dried rosemary

Garlic cloves, minced 6 cup Water

cup Fresh baby spinach To taste Salt

2 cup Carrot, cubed

2 Celery stalk, sliced

1 cup Dry navy beans

2 Bay leaf

- Soak the navy beans in water overnight in the refrigerator.
- Add the sausage, onion, garlic, spinach, carrots and celery to the inner pot and mix thoroughly.
- Press the COOK switch down to begin heating.
- Sauté the sausage and vegetables until the sausage is no longer pink.
- Add the soaked navy beans, bay leaf, thyme, rosemary, and water then place the lid on top.
- After the cooker automatically switches to Warm, press the cook switch down once more.
- Allow the soup to cook until the cooker automatically switches to WARM again,
   then add salt to taste and serve.



### Steamed Fish Over Rice

### **SERVES 1.**

1 cup Rice

2 cup Water

White fish fillet

½ tbsp½ tbspGround pepper

1 tsp Brown sugar

4 tbsp Soy sauce

2 tbsp Olive oil

2 Green onion, chopped

- Rinse rice and add water to the inner pot.
- Put the fish filet and a handful of chopped green onions in the steam tray.
- Place the inner pot in the rice cooker, stack the steam tray inside, close the lid, and press the *COOK* switch down.
- While the fish and rice are cooking, combine and whisk remaining ingredients in a small bowl.
- Immediately after the rice cooker switches to **WARM** mode, check the meat for doneness, brush sauce on fish, and serve.

AROMA 31.



### Meatloaf

#### **SERVES 2.**

1/4 cup Sweet onion, finely chopped

1/4 cup Carrot, finely chopped1/4 cup Breadcrumbs or panko

2 tbsp Cooking wine

1 Egg

1 cup Water

1/4 lb Ground beef

To taste Salt and pepper

- Combine all the ingredients except water in a large bowl and mix well.
- Place a piece of parchment paper in the steam tray. Add the beef mixture onto the parchment and shape into a small loaf.
- Add water to the inner pot then place the steam tray on top and cover with the lid.
- Press the **COOK** switch down to begin heating.
- Once the cooker switches to **WARM**, remove the meatloaf from the parchment and serve.

AROMA 32.



# Steamed Shrimp in Garlic Sauce

#### **SERVES 1.**

5 Medium white shrimp

6 Garlic clove, minced

-- Green onion, chopped for garnish

-- Lemon slice, for garnish

½ cup Water

- Place a piece of parchment paper in the steam tray. Add the shrimp to the parchment then coat with minced garlic.
- Add water to the inner pot, then place the steam tray on top and cover with the lid.
- Press the COOK switch down to begin heating.
- Once the cooker switches to **WARM**, remove the shrimp then garnish with chopped green onions and lemon to serve.

AROMA<sup>°</sup> 33.

# JOIN THE COMMUNITY

### #CookwithAroma

We can't wait to see what you cook up! Join our growing community of home chefs on social media and discover hundreds of healthy new recipes.

Share your creations on social media and let's savor the joy of cooking together, creating a vibrant tapestry of tastes.





